



www.montigo.com

## Installation Operation & Maintenance Manual

*Check local codes and read all instructions prior to installation.*

# H-Series DL Gas Fireplace

**H34DL** Indoor  
**H38DL** Indoor  
**H42DL** Indoor



### **Warning:**


Improper installation, adjustment, alteration, service or maintenance can cause injury or property damage. Refer to this manual. For assistance or additional information consult a qualified installer, service agency or the gas supplier.

### **Safety Notice:**

Glass doors on gas fireplaces are extremely hot while the fireplace is on and remain hot even after the fireplace has been turned off. Safety screens are available and can reduce the risks of severe burns. Please keep children away from the fireplace at all times.

### **For Your Safety:**

Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.

 **Warning:** If the information in these instructions is not followed exactly, a fire or explosion may result causing property damage, personal injury or death.

### WHAT TO DO IF YOU SMELL GAS

- *Do not try to light any appliance.*
- *Do not touch any electrical switch; do not use any phone in your building.*
- *Immediately call your gas supplier from a neighbor's phone. Follow the gas supplier's instructions.*
- *If you cannot reach your gas supplier, call the fire department.*

Installation and service must be performed by a qualified installer, service agency or the gas supplier.



- *Installer: Leave this manual with the appliance.*
- *Consumer: Retain this manual for future reference.*



# Table of Contents

## Safety Alert Key

<b>Introduction</b> .....	3
Models.....	3

## Installation

Before you Start .....	4
Installation Checklist .....	4

## Section 1: Installation Overview and Product Dimensions ..... 5

## Section 2: Framing the Fireplace..... 6

Clearances .....	
Installing the Standoffs .....	

## Section 3: The Direct Vent System ..... 7 - 16

### Section 3-1: Converting from Top Vent to Rear Vent .... 7

### Section 3-2: Installing a Roof mounted Termination 8 - 9

▪ Section 3-2-1: Venting Layout .....	8
▪ Roof mounted Terminations	
Standard Top Vent (no elbows or offsets).....	8
Top Vent (two elbows one offset) .....	8
Top Vent (multi-elbows and offsets) .....	8
Standard Roof Vent (one elbows no offsets).....	9

▪ Section 3-2-2: Venting Components .....	9
---	---

### Section 3-3: Installing a Wall mounted Termination .... 10

▪ Standard PTO Installation.....	10
▪ Pre-installed MSR Frame .....	10
▪ Pre-installed BSR Frame .....	10
▪ Installing MOSR Frame .....	10
▪ Installing VSS Termination Shield .....	10
▪ Installing PTKOG Heat Guard .....	10
▪ Section 3-3-1: Venting Layout .....	11
▪ Top Vent, Wall mounted Graph, H34DL.....	11
▪ Top Vent, Wall mounted Graph, H38DL.....	11
▪ Top Vent, Wall mounted Graph, H42DL.....	12
▪ Top Vent, Wall mounted termination (one elbow) ....	12
▪ Top Vent, Wall mounted termination (multi elbow)...	12
▪ Rear Vent, Wall mounted Graph, H34DL .....	13
▪ Rear Vent, Wall mounted Graph, H38DL .....	13
▪ Rear Vent, Wall mounted Graph, H42DL .....	14
▪ Standard Rear Vent, (no elbows or offsets) .....	14
▪ Rear Vent, Wall mounted termination (two elbows). 14	
▪ Rear Vent, Wall mounted termination (45° corner).. 15	
▪ Rear Vent, Wall mounted termination (-45° corner). 15	

▪ Section 3-3-2: Venting Components.....	16
--	----

▪ Section 3-3-3: Heat Shields .....	17
-------------------------------------	----

▪ Installing a RHS8 Wall Mounted Heat Shield .....	17
--	----

▪ Installing a RHS101 Wall Mounted Heat Shield .....	17
--	----

## Section 4: Wiring ..... 18

▪ Honeywell gas control and pilot .....	18
---	----

▪ SIT - IPI gas control and pilot.....	18
--	----

▪ Installing HFK Fan Kit .....	18
--------------------------------	----

## Section 5: Installing the Gas Line ..... 19

### Section 5-1: Fuel Conversion ..... 19

### Section 5-2: Gas Pressure ..... 19

### Section 5-3: Gas Connection..... 19

## Section 6: Finishing ..... 20

## Section 7: Installing and Removing the Door ..... 21

## Section 8: Installing the Accessories ..... 22 - 24

▪ Installing the H34DL Log Set .....	22
--------------------------------------	----

▪ Installing the H38DL & H42DL Log Set.....	23 - 34
---	---------

▪ Installing the Top / Bottom Horizontal Louvers .....	24
--	----

## Section 9: Operation..... 25 - 27

▪ Start-up Sequence with Continuous Pilot .....	25
---	----

▪ Start-up Sequence with Honeywell Electronic Ignition 26	
---	--

▪ Start-up Sequence SIT-IPI Gas valve .....	27
---	----

## Maintenance ..... 28 - 30

▪ General .....	28
-----------------	----

▪ Cleaning.....	28
-----------------	----

▪ Hi-Lo Burner Adjustment .....	28
---------------------------------	----

▪ Pilot Burner Adjustment.....	28
--------------------------------	----

▪ Troubleshooting.....	29
------------------------	----

SIT- Nova 820 Gas Control Valve .....	29
---------------------------------------	----

SIT- IPI Electronic Gas Control Valve .....	29
---	----

Honeywell Gas Control Valve .....	29
-----------------------------------	----

▪ Parts List .....	30
--------------------	----

## Appendix

A. Termination Locations.....	31
-------------------------------	----

B. Warranty .....	32
-------------------	----

C. State of Massachusetts. ....	33
---------------------------------	----

D. Mobile Home. ....	34
----------------------	----



## Warning:

Read this manual before installing, operating or troubleshooting this appliance. Please retain this owner's manual for future reference.

# Introduction

## Safety Alert Key:

- **WARNING!** Indicates a hazardous situation which, if not avoided could result in death or serious injury.
- **CAUTION!** Indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.
- **NOTICE:** Used to address practices not related to personal injury.
- **Important:** Used to address practices not related to personal injury.

## INTRODUCTION

Congratulations on your purchase of a Montigo Fireplace.

With over 30 years of experience, Montigo is committed to providing you with a gas fireplace that is not only a beautiful addition to your space, but that is also designed and manufactured to the highest safety, reliability and engineering standards.

We strongly encourage you to read and carefully follow the instructions laid out in this Installation, Operation and Maintenance Manual and retain it for your future reference. Pay special attention to all cautions, warnings, and notices throughout this manual intended to ensure your safety.

This manual covers installation, operation and maintenance. Lighting, operation and care of this fireplace can be easily performed by the homeowner. All installation and service work should be performed by a qualified or licensed installer, plumber or gasfitter as certified by the state, province, region or governing body where the fireplace is being installed.

# WARNING

**HOT GLASS WILL  
CAUSE BURNS.  
DO NOT TOUCH GLASS  
UNTIL COOLED.  
NEVER ALLOW CHILDREN  
TO TOUCH GLASS.**

### Warranty and Installation Information: (See Appendix B)

The Montigo warranty will be voided by, and Montigo disclaims any responsibility for, the following actions:

- ▶ Modification of the fireplace and/or components including Direct-Vent assembly or glass doors.
- ▶ Use of any component part not manufactured or approved by Montigo in combination with this Montigo fireplace system.
- ▶ Installation other than as instructed in this manual.

Consult your local Gas Inspection Branch on installation requirements for factory-built gas fireplaces. Installation & repairs should be done by a qualified contractor.

MODEL	Natural Gas	Liquid Propane	Gas Rating (BTU hr)	Traditional Burner / Logset	Contemporary Burner w/River rock	Linear Burner w/ Glass Accessories	Standing Pilot Ignition	Honeywell Hot Surface Ignition	SIT Electronic Ignition
H34DLN	X		18,000	X			X		
H34DLNE	X		18,000	X				X	
H34DLNI	X		18,000	X					X
H34DLM	X		18,000	X			X		
H34DLL		X	18,000	X			X		
H34DLLE		X	18,000	X				X	
H34DLLI		X	18,000	X					X
H38DLN	X		26,000	X			X		
H38DLNE	X		26,000	X				X	
H38DLNI	X		26,000	X					X
H38DLL		X	26,000	X			X		
H38DLLE		X	26,000	X				X	
H38DLLI		X	26,000	X					X
H42DLN	X		34,000	X			X		
H42DLNE	X		34,000	X				X	
H42DLNI	X		34,000	X					X
H42DLL		X	32,000	X			X		
H42DLLE		X	32,000	X				X	
H42DLLI		X	32,000	X					X

This installation, operation and maintenance manual is applicable to the models described below. Refer to your rating plate to verify included options. Throughout this manual instructions are applicable to all models designated as **H\*DL\*** unless otherwise noted.

# Installation



## IMPORTANT MESSAGE: SAVE THESE INSTRUCTIONS

The H\*DL\* Direct Vent fireplace must be installed in accordance with these Instructions. Carefully read all the Instructions in this manual first. Consult the Local Gas Branch to determine the need for a permit prior to starting the installation. It is the responsibility of the installer to ensure this fireplace is installed in compliance with the manufacturers instructions and all applicable codes.

### BEFORE YOU START:

**INSTALLATION AND REPAIRS SHOULD BE DONE BY AN AUTHORIZED SERVICE TECHNICIAN. THE APPLIANCE SHOULD BE INSPECTED BEFORE USE AND AT LEAST ANNUALLY BY A PROFESSIONAL SERVICE TECHNICIAN. MORE FREQUENT CLEANING MAY BE REQUIRED DUE TO EXCESSIVE LINT FROM CARPETING, BEDDING MATERIAL, ETC. IT IS IMPERATIVE THAT CONTROL COMPARTMENTS, BURNERS AND CIRCULATING AIR PASSAGEWAYS OF THE FIREPLACE ARE KEPT CLEAN.**



### CAUTION!

Due to its high operating temperatures, the appliance should be located out of traffic & away from furniture and draperies.

- Children and adults should be alerted to the hazards of the high surface temperature, which could cause burns or clothing ignition.
- Young children should be carefully supervised when they are in the same room as the appliance.
- Clothing or other flammable materials should not be placed on or near the appliance.



### WARNING!

When this appliance is installed directly on any combustible material other than wood flooring, it must be installed on a metal or wood panel extending the full width and depth of the appliance.

## Installation Checklist

- Determine the desired install location of your fireplace.
- See **Section 1**, Dimensions on **Page 5**, and refer to the Framing **Section 2** for details.
- Select the location of your termination and resulting vent run.
- **Your selected termination location must be the highest point in the Direct Vent installation.**
- Should it be impossible to meet the venting requirements laid out in **Section 3**: Venting, please contact Montigo regarding the use of a Montigo Power Vent.
- Lay out the Vent run; calculating the required elbows and straight runs of 4"/7" flex or rigid pipe.
- Layout Electrical Requirements Refer to **Section 4**: Wiring, for Details.
- Refer to **Section 5**: Installing the Gas Line, for details on the gas connection and access.
- Refer to local codes and guidelines for installation requirements.
- **Installation and repairs should be done by a qualified contractor and must conform to:**

- **Installations in Canada** must conform to the current CAN/CGAB-149.1 and .2 Gas Installation Code and local regulations.

- **Installations in the USA** must conform to local codes, or in the absence of local codes to the National Fuel Gas Code, ANSI Z223.1-1988.

- **See Appendix C for installation within the State of Massachusetts.** This fireplace must comply with NFPA-54 Chapter 10.




# Installation

## Section 1: Installation Overview and Product Dimensions


Please review the Installation Checklist on **Page 4** for general information on preparing for a successful installation of your fireplace.

The **H\*DL\*** fireplace may be installed in any location that maintains proper clearances to air conditioning ducts, electrical wiring and plumbing. Safety, as well as efficiency of operation, should be considered when selecting the fireplace location. Try to select a location that does not interfere with room traffic, has adequate ventilation and offers an accessible path for Direct Vent installation.


The fireplace dimensions are shown below:

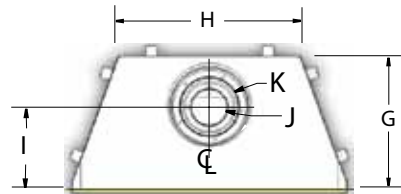

Top View

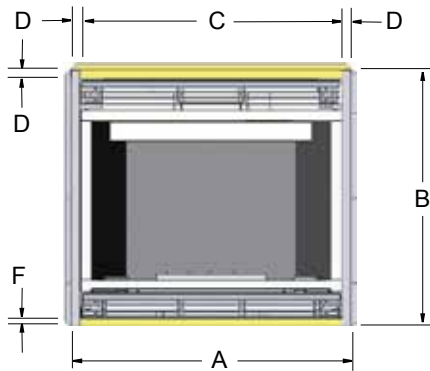

Front View

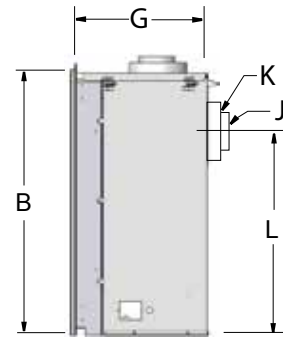

LH-Side View

	A	B	C	D	E	F	G	H	I	J	K	L
H34DL*	33 <sup>7</sup> / <sub>8</sub>	31 <sup>1</sup> / <sub>2</sub>	31 <sup>3</sup> / <sub>8</sub>	1 <sup>1</sup> / <sub>4</sub>	21 <sup>1</sup> / <sub>2</sub>	1	15 <sup>1</sup> / <sub>4</sub>	21 <sup>3</sup> / <sub>4</sub>	7 <sup>3</sup> / <sub>4</sub>	4	7	25
H38DL*	37 <sup>3</sup> / <sub>4</sub>	34 <sup>1</sup> / <sub>2</sub>	34 <sup>1</sup> / <sub>4</sub>	1 <sup>1</sup> / <sub>4</sub>	24 <sup>1</sup> / <sub>2</sub>	1	16 <sup>1</sup> / <sub>4</sub>	25	9 <sup>1</sup> / <sub>4</sub>	5	8	27 <sup>3</sup> / <sub>4</sub>
H42DL*	42 <sup>1</sup> / <sub>4</sub>	38 <sup>1</sup> / <sub>2</sub>	39 <sup>3</sup> / <sub>4</sub>	1 <sup>1</sup> / <sub>4</sub>	28 <sup>1</sup> / <sub>2</sub>	1	17 <sup>3</sup> / <sub>4</sub>	28 <sup>1</sup> / <sub>4</sub>	10 <sup>3</sup> / <sub>8</sub>	5	8	31 <sup>1</sup> / <sub>2</sub>

Figure 1. Fireplace dimensions, (ALL Models, shown in Table on Page 3).


# Installation



## Section 2: Framing


- 1). Frame in the enclosure for the unit with framing materials. The framed opening for the assembled fireplaces are as shown below, see **Figure 2**.

**NOTE:** When constructing the framed opening, please ensure there is access to install the gas line when the unit is installed. See **Figure 22**.

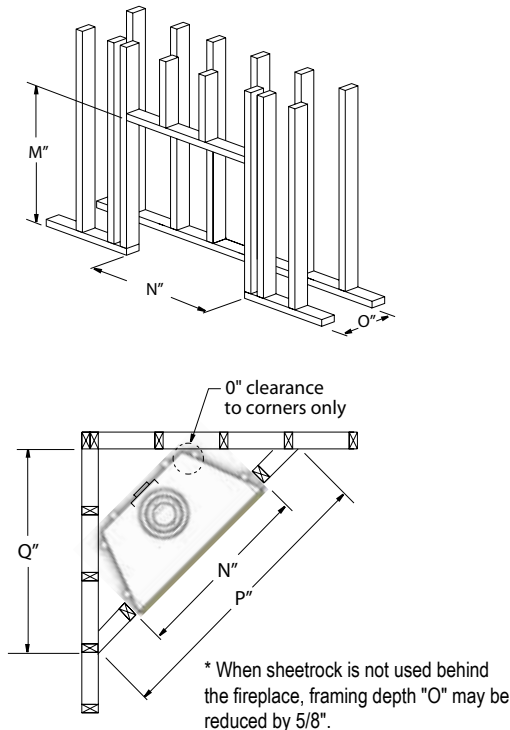


	M	N	O	P	Q	S	T
H34DL*	37 1/4	33 3/4	17 7/8	52 3/8	37	31	41
H38DL*	40 1/4	37 3/4	18 7/8	57 1/2	40 5/8	34	44
H42DL*	44 1/4	42	19 3/8	63 3/4	45 1/8	38	48

**Figure 2.** Framing dimensions, (Straight wall & Corner Installation). (ALL Models, shown in Table on Page 3).

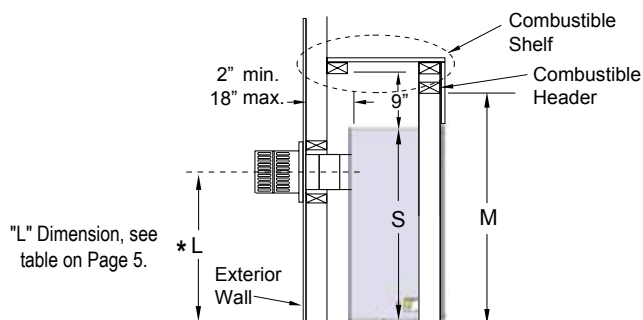

**Figure 3.** Combustible Framing for shelves over the fireplace, Rear vent.

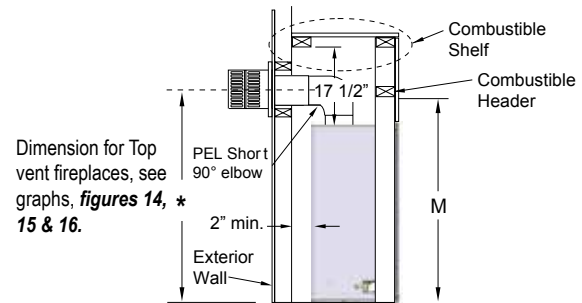

**Figure 4.** Combustible Framing for shelves over the fireplace, Top vent.

### Clearances

When installing a shelf over the top of the fireplaces, the following guidelines must be adhered to:

For Rear Vent applications, the minimum clearance is 2" from the rear of the fireplace to a wall, or any combustible materials, and 9" clearance from the top of the fireplace to the underside of any combustible shelf materials.

For Top Vent applications, the minimum clearance is 2" from the rear of the fireplace to a wall, or any combustible materials, and 17 1/2" to the underside of any combustible shelf materials, **Figure 4**.


For Top or Rear Vent applications where the Minimum mantel height is required above the fireplace, (for an alcove or low profile shelf), ALL Materials **MUST BE NON-COMBUSTIBLE**, **Figure 5**. The minimum clearance is 2" from the rear of the fireplace to a wall, or any combustible materials.

The fireplace clearances are shown below:

MODEL	Top - Rear Vent*	Top - Top Vent	Back	Sides	Floor	Mantel
H*DL*	9	17 1/2	2	1	0	4

### Installing The Standoffs

To avoid elevated mantel temperatures, all H\*DL\* - Series gas fireplaces are required to have the supplied standoffs installed. The fireplace is supplied with two standoffs. Bend and install these standoffs on top of the fireplace ensuring that the height of the standoff maintains a MIN. 6" clearance.

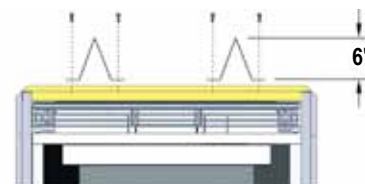

**Figure 6.** Installing the standoffs.





# Installation

## Section 3: Venting

Montigo supplies a variety of direct venting and termination options. **The direct vent termination location MUST be selected such that it is the highest point in the venting assembly.** It should also be selected such that it provides the shortest vent run possible. Should it be impossible to ensure that the termination is the highest point or to meet the venting guidelines laid out below please contact your Montigo dealer to discuss power venting options.

### NOTES FOR PLANNING VENTING:


- Venting can originate from the unit through the top or through the rear
- Venting can terminate through the roof or through an exterior wall.
- Refer to Appendix A - Termination Locations to ensure the planned termination location is acceptable.
- Once the termination location has been established, refer to the appropriate section below for installation details
- All fireplaces shipped from the factory are *Top vent*.

See Section 3-1 for converting the unit from top vent to rear vent.

### Section 3-1: CONVERTING TO REAR VENT


Use the following instructions to convert an H\*DL\* for Rear Vent use:

1. Remove the Rear flue cover and gasket (4/5" and 7/8") on the flue outlet, as shown in **Figure 9**.
2. Next, Remove the Top flue collar's (4/5" and 7/8") on the flue outlet, as shown in **Figure 9**.
3. Install the (removed) Rear flue cover and gasket material, to the Top vent outlet. Fasten the cover with included hardware, as illustrated **Figure 9a**.

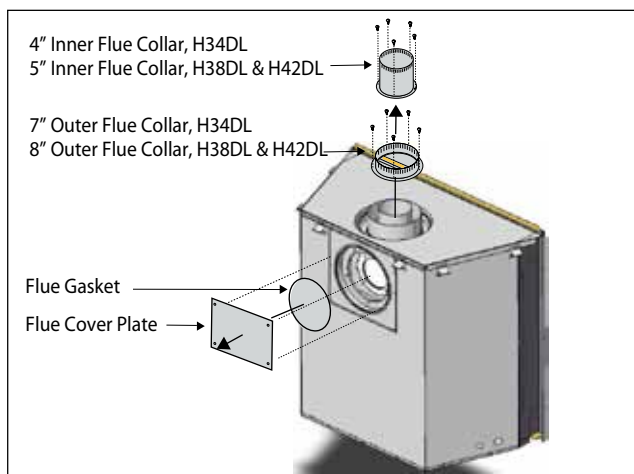

**Figure 9.** Flue cover and collar removal, *Top Vented* fireplace.

4. Install the (4/5" and 7/8") collars to the rear vent outlet using the included hardware, as illustrated **Figure 9a**.

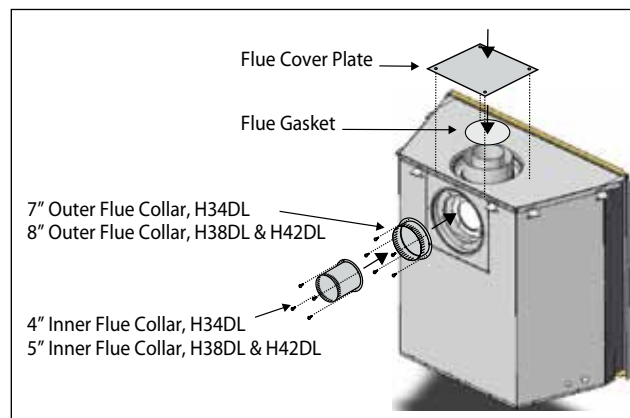

**Figure 9a.** Flue cover and collar installation, *Rear Vented* fireplace.

# Installation



## Section 3-2: INSTALLING A ROOF MOUNTED DIRECT VENT TERMINATION (MVTK-1 / PVTK-1)

This section applies to installations where the direct vent termination will be roof mounted.


### Section 3-2-1: VENTING LAYOUT

Selection of components and details of venting lay out should adhere to the following guidelines:


- The maximum termination point is 32' above the fireplace (NOTE: if the maximum termination height is used, the flame pattern may be affected).
- The Vertical termination must be a minimum 2' higher than where the termination exits the roofing materials, (asphalt shingles, cedar shakes, etc). This distance should be measured from the high side of the roof slope where the flue flashing intersects the roofing materials. (see **Figures 11 to 11c** \*).
- Termination location must be a minimum 6' from a mechanical air inlet.
- Termination location must be a minimum 18" from a parapet wall.
- A maximum of two offsets (each offset is made up of 2-90° bends) may be made.
- Install a firestop at any location where venting passes through combustible materials and construction.
- Utilize support straps, or support plates, and rings (as required) to meet acceptable building practices.
- Install all roof flashing and storm collars as shown.

### Roof mounted Terminations


The following details are some possible configurations for Roof mounted terminations. See below.

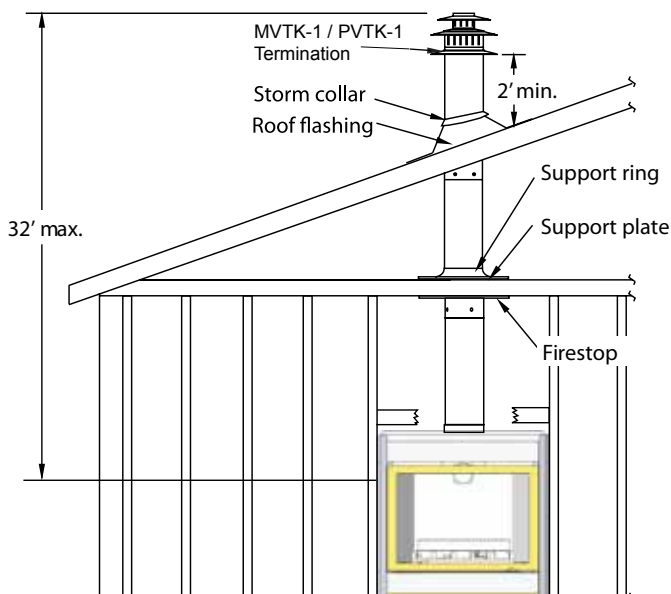

**Figure 11. Top vent, Roof mounted** termination with no offset in vent run.

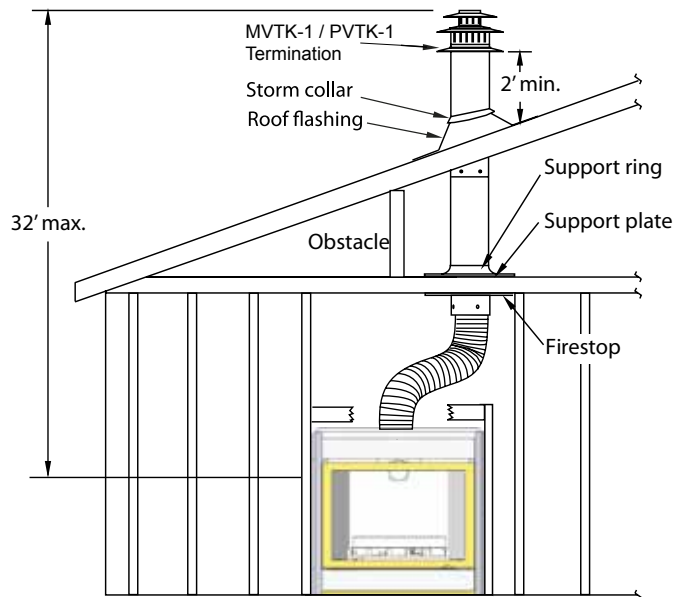

**Figure 11a. Top vent, Roof mounted with 1 offset** (1 offset= two 90° bends).

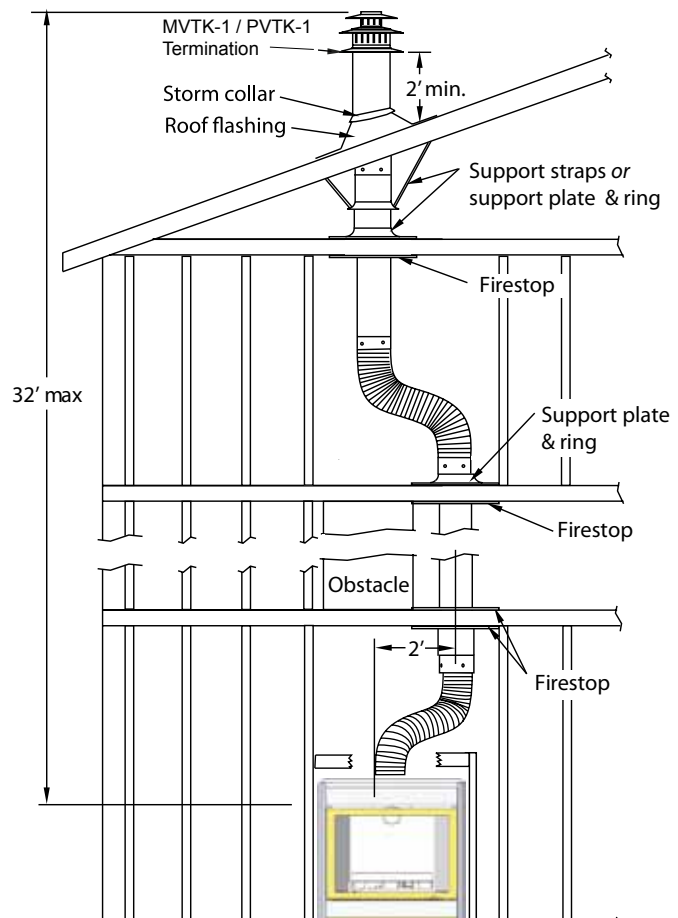

**Figure 11b. Top vent, Roof mounted with 2 offsets** (1 offset= two 90° bends).





# Installation

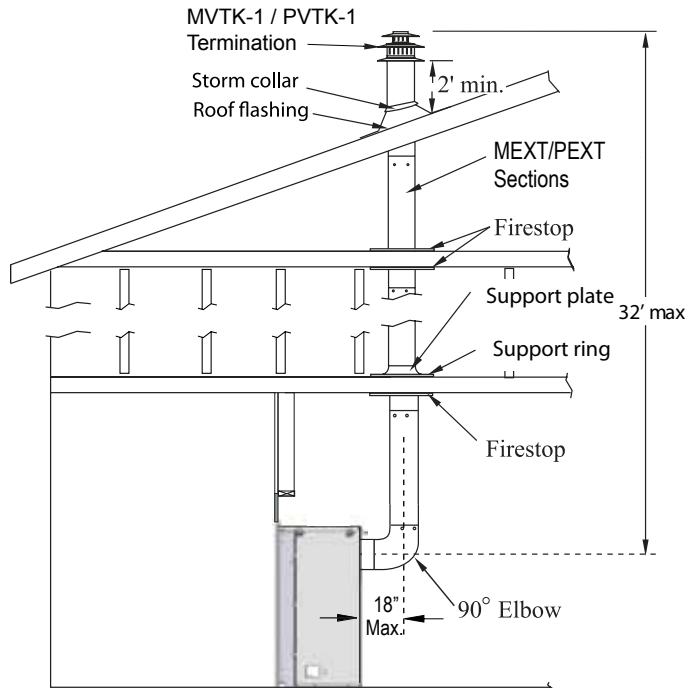


Figure 11c. Rear vent, Roof mounted venting (1 = 90° bend).

## Section 3-2-2: VENTING COMPONENTS

Select from the following components and associated Montigo part numbers for installation of a Roof Mounted Termination. Use only Montigo Vent Components. Use of non-Montigo parts will void the warranty and may impede operation of the fireplace.

	4" / 7" Venting	5" / 8" Venting
A - Termination	MVTK-1	PVTK-1
B - Flex Sections	MFL - 1 (12" f/f Section)	PFL - 1 (12" f/f Section)
	MFL - 18 (18" f/f Section)	PFL - 18 (18" f/f Section)
	MFL - 2 (24" f/f Section)	PFL - 2 (24" f/f Section)
	MFL - 3 (36" f/f Section)	PFL - 3 (36" f/f Section)
	MFL - 4 (48" f/f Section)	PFL - 4 (48" f/f Section)
	MFL - 6 (72" f/f Section)	PFL - 6 (72" f/f Section)
C - Rigid Sections	MXT - 5 (5" f/f Section)	PXT - 5 (5" f/f Section)
	MXT - 10 (10" f/f Section)	PXT - 10 (10" f/f Section)
	MEXT - 1 (12" f/f Section)	PEXT - 1 (12" f/f Section)
	MXT - 20 (20" f/f Section)	PXT - 20 (20" f/f Section)
	MEXT - 2 (24" m/f Section)	PEXT - 2 (24" m/f Section)
	MEXT - 3 (36" m/f Section)	PEXT - 3 (36" m/f Section)
	MEXT - 4 (48" m/f Section)	PEXT - 4 (48" m/f Section)
	MEXT - 6 (72" m/f Section)	PEXT - 6 (72" m/f Section)
D - Elbows	MEL-90MM (m/m 90° Elbow)	PEL-90MM (m/m 90° Elbow)
	MEL-90FF (f/f 90° Elbow)	PEL-90FF (f/f 90° Elbow)
	MEL-90FM (f/m 90° Elbow)	PEL-90FM (f/m 90° Elbow)
	MEL-45FM (f/m 45° Elbow)	PEL-45FM (f/m 45° Elbow)
E - Support Ring & Plate	MSPXT-8	PSPXT-8
F - Firestop	FS-8	PS-8
G - Roof Flashing	MRF-7 (1/12 - 7/12 pt.)	PRF-7 (1/12 - 7/12 pt.)
	MRF-12 (7/12 - 12/12 pt.)	PRF-12 (7/12 - 12/12 pt.)

Connection and installation of the vent components should adhere to the following guidelines:

- Use any combination of rigid and Flex pipe as required.
- Flex sections may be stretched up to 50% of their total length (e.g. a 24" section maybe stretched to 36").
- Connect all vent sections using a minimum of three sheet metal screws on the outer pipe flue.
- Ensure the pipe ends male to female slide in a minimum of 1 1/2" of overlap.
- Ensure all runs are supported with a minimum of 3 supports per 10' of venting.
- When hanging/ supporting venting, ensure that 1" clearance is maintained on sides and bottom of vent runs and 2" above horizontal vent runs to any combustible material.
- Ensure when cutting sections of rigid pipe to maintain integrity of internal supports.
- Place the springs, supplied with the pipe kit, between the outer and inner pipes to keep the pipes separate and avoid any possible hot spots.
- Montigo recommends the use of a flex section for the final pipe connected directly to the fireplace offering greater flexibility of installation and absorption of movement.
- When penetrating a combustible ceiling, a ceiling firestop must be used.
- Montigo recommends that all exterior corners and joints be sealed with exterior caulking however we encourage you to consult your Building Envelope Engineer or Waterproofing Consultant for further recommendations.

### IMPORTANT:

Please Refer to your Building Envelope Engineer or Waterproofing Consultant for a review of ALL penetrations through exterior walls or the roof.

# Installation



## Section 3-3: INSTALLING A WALL MOUNTED DIRECT VENT TERMINATION

This section applies to installations where the direct vent termination will be wall mounted.

### 1). Installation of Termination with built in frame

A Termination with a Built-In Frame is installed during framing of a structure.

1. Frame the termination opening to 11" x 11".
2. Install exterior sheathing to the structure framing.
3. Fasten the termination to the sheathing using a minimum of 4 screws.

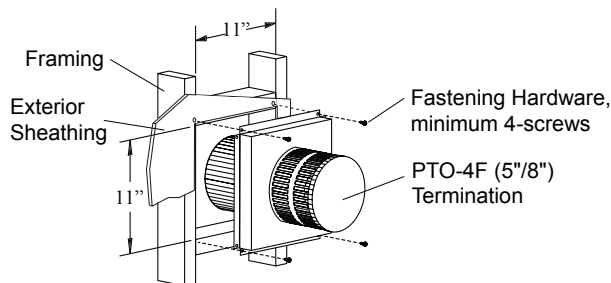


Figure 12. Installing a PTO-F termination.

### 2). Installation of termination frame at time of framing

Terminations with a MSR frame allow the installation of the frame prior to installation of the termination.

1. Frame the termination opening to 12" x 12".
2. Secure the MSR Frame to the exterior sheathing of the structure.
3. Fasten the termination to the MSR Frame using a minimum of 4 screws.

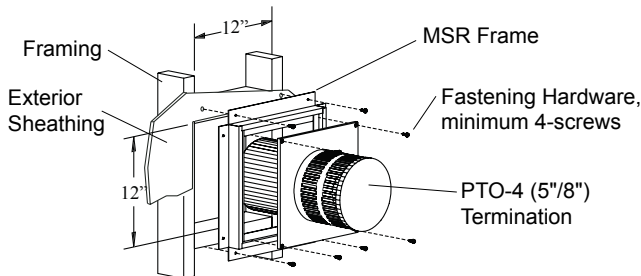


Figure 12a. Installing a PTO termination with the MSR frame.

### 3). Installation of termination frame at time of framing in Masonry

Terminations with a BSR frame allow the installation of the frame in masonry prior to the installation of the termination

1. Frame the BSR opening to 12" x 12".
2. Secure the BSR Frame to the exterior sheathing of the structure.

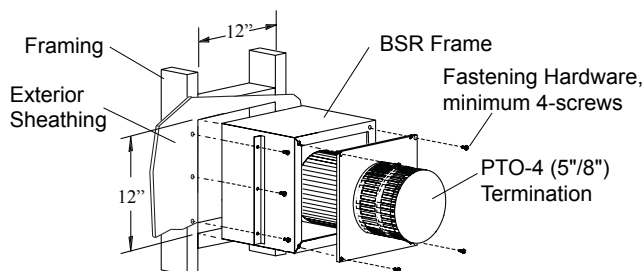


Figure 12c. Installing a PTO termination with the BSR frame.

### 4). Installation of termination from inside structure

A Termination with a MOSR Frame is installed from the inside of the structure. These are commonly used in high-rise construction.

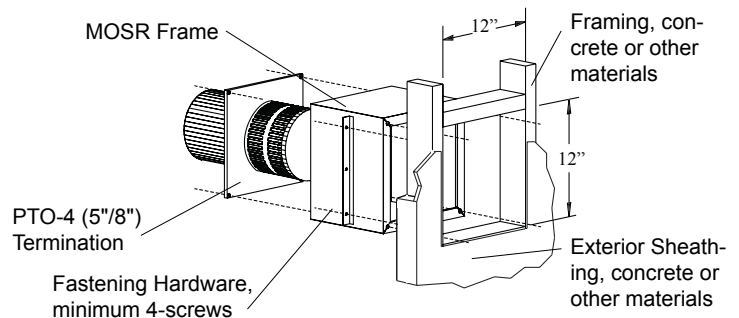


Figure 12b. Installing a PTO termination with the MOSR frame.

1. Frame the MOSR opening to 12" x 12".
2. Fasten the MOSR frame to the interior side of the studs, concrete, or finished wall construction using a minimum of 4 screws.
3. Insert the termination into the MOSR frame as shown here, (from the inside) and attach to the MOSR by installing a min. quantity of 4 bolts into the threaded nuts on the MOSR Frame.

### 5). Installation of a termination shield for Vinyl Siding

The VSS Termination shield is installed when the exterior of a structure is clad with Vinyl siding. It is placed directly above, and on-center with the termination.

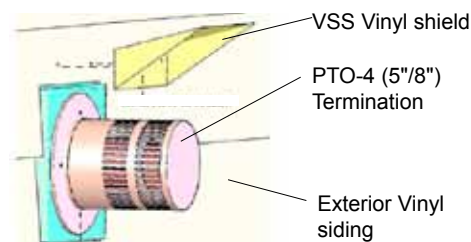


Figure 12c. Installing the VSS Vinyl Shield.

**Installing Heat Guards over Terminations** is recommended in installations where the termination is located within 7' feet above grade, or above a pedestrian walkway, and may be Required by code in Public areas.

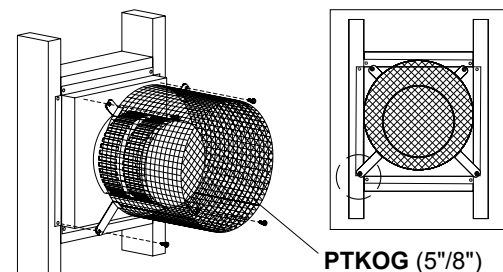


Figure 12d. Installing a PTO termination heat guard.

1. Ensure that the two **long** mounting brackets are facing the bottom of the termination. (See inset). This will provide more heat protection at the top of the termination, where temperatures are highest.
2. Attach to the faceplate of the termination using four sheet metal screws.



# Installation

**Section 3-3-1: VENTING LAYOUT: Wall mounted termination.** Selection of components and details of venting layout should adhere to the following guidelines:

- Vent terminations must not be recessed in walls or siding.
- All through-the-wall terminations within 3' of the fireplace must have a Montigo Heat Shield (RHS101) installed. See **Section 3-3-3**.
- All through-the-wall terminations beyond 3' of the fireplace must have a Montigo Heat Shield (RHS8) installed. See **Section 3-3-3**.
- Once the proposed venting layout has been determined, refer to **Figure 13, 14 or 15** to ensure the layout is acceptable.

## Notes Wall Mounted Terminations: Top Vent

- All measurements for vertical or horizontal runs are measured from center of the vent pipe.
- Venting runs *must* fall within the limits set by the venting graphs, **Figure 13, 14 & 15**.

## Wall mounted Terminations

The following details are some possible configurations for Wall mounted terminations. See below.

### The Venting Graph: H34DL \*

Measure the vertical height from the fireplace hearth to the centre of the termination and the horizontal run from the fireplace flue collar to the wall flange of the termination. Plot on the Venting Graph **Figure 13** with an 'X'.

If the 'X' falls on or above the top boundary of the shaded area, the installation is acceptable.

#### Example A: (Acceptable Installation)


If the vertical dimension from the hearth is 108" and the horizontal run to the wall flange of the vent termination is 180", this would be an acceptable installation.

#### Example B: (Acceptable Installation)

If the vertical dimension from the hearth is 48" and the horizontal run to the wall flange of the vent termination is 72", this would be an acceptable installation.

#### Example C: (Unacceptable Installation)

If the vertical dimension from the floor of the fireplace is 60" and the horizontal run to the wall flange of the vent termination is 144", this would **NOT** be an acceptable installation.

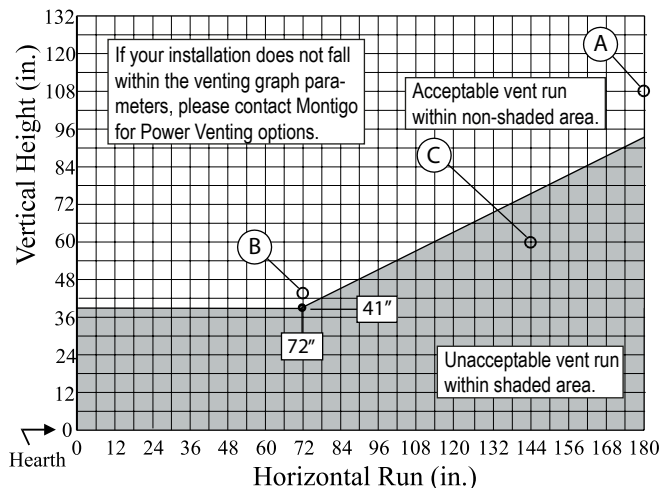

**Figure 13 H34DL \* Top Vent Venting Graph for wall mounted terminations, See Figures 15a & 15b.**

### The Venting Graph: H38DL \*

Measure the vertical height from the fireplace hearth to the centre of the termination and the horizontal run from the fireplace flue collar to the wall flange of the termination. Plot on the Venting Graph **Figure 14** with an 'X'.

If the 'X' falls on or above the top boundary of the shaded area, the installation is acceptable.

#### Example A: (Acceptable Installation)


If the vertical dimension from the hearth is 84" and the horizontal run to the wall flange of the vent termination is 36", this would be an acceptable installation.

#### Example B: (Acceptable Installation)

If the vertical dimension from the hearth is 108" and the horizontal run to the wall flange of the vent termination is 144", this would be an acceptable installation.

#### Example C: (Unacceptable Installation)

If the vertical dimension from the floor of the fireplace is 72" and the horizontal run to the wall flange of the vent termination is 108", this would **NOT** be an acceptable installation.

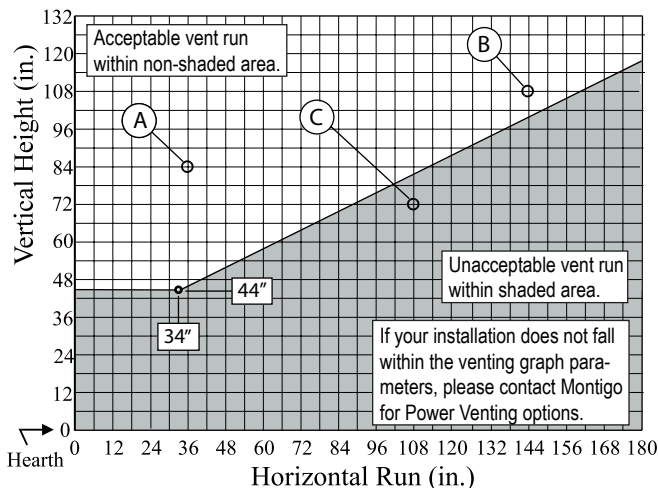

**Figure 14 H38DL \* Top Vent Venting Graph for wall mounted terminations, See Figures 15a & 15b.**

# Installation



## The Venting Graph: H42DL\*

Measure the vertical height from the fireplace hearth to the centre of the termination and the horizontal run from the fireplace flue collar to the wall flange of the termination. Plot on the Venting Graph **Figure 15** with an 'X'. If the 'X' falls on or above the top boundary of the shaded area, the installation is acceptable.

If the 'X' falls on or above the top boundary of the shaded area, the installation is acceptable.

### Example A: (Acceptable Installation)


If the vertical dimension from the hearth is 84" and the horizontal run to the wall flange of the vent termination is 36", this would be an acceptable installation.

### Example B: (Acceptable Installation)


If the vertical dimension from the hearth is 120" and the horizontal run to the wall flange of the vent termination is 132", this would be an acceptable installation.

### Example C: (Unacceptable Installation)


If the vertical dimension from the floor of the fireplace is 72" and the horizontal run to the wall flange of the vent termination is 108", this would **NOT** be an acceptable installation.

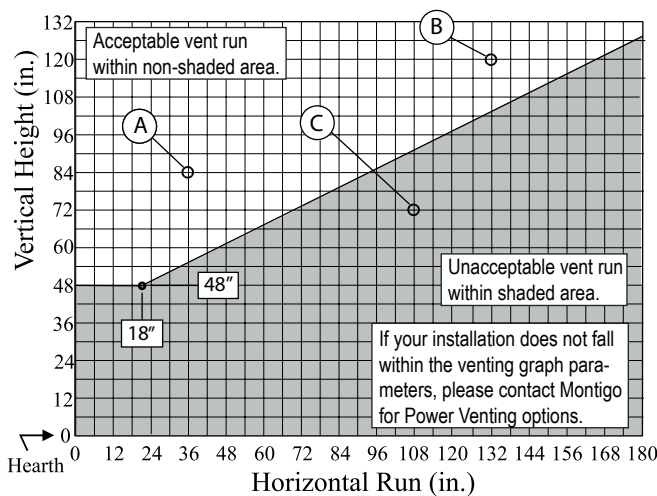

**Figure 15 H42DL\* Top Vent Venting Graph for wall mounted terminations, See Figures 15a & 15b.**

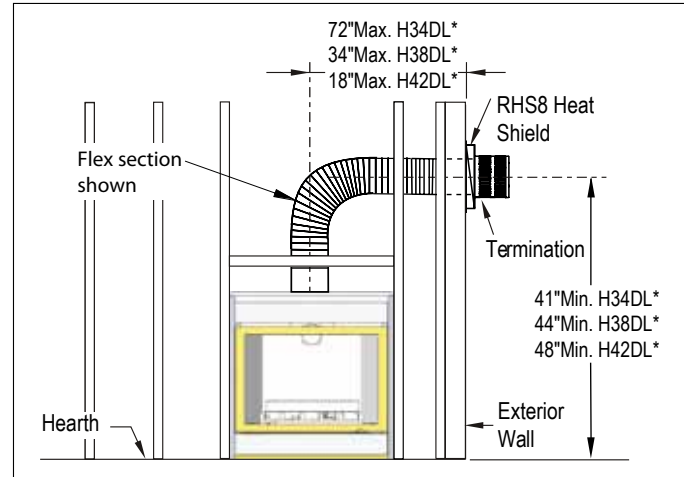

**Figure 15a. Top Vented, wall mounted installation with 1 elbow (1 one 90° bend). The vent run must comply with Venting Graph for Top vent, wall mounted terminations, Figure 13, 14 & 15.**

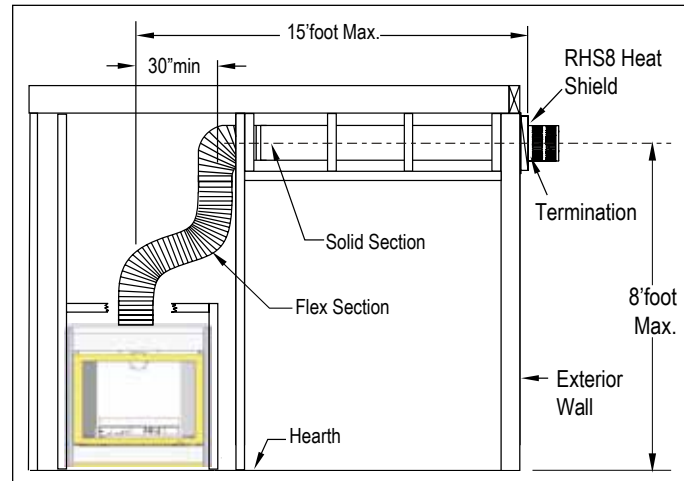

**Figure 15b. Top Vented, wall mounted Multi-elbow installation. See Venting Graph for Top vent, wall mounted terminations, Figure 13, 14 & 15.**



# Installation

## Notes Wall Mounted Terminations: Rear Vent

- All dimension lengths for vertical or horizontal runs are measured from center of the vent pipe.
- Venting runs *must* fall within the limits set by the venting graphs, see **Figure 16, 17 & 18**.
- Fireplace must be converted to Rear Vent configuration prior to running vent, see **Figure 7 and 8**.

## The Venting Graph H34DL\*

Measure the vertical height from the fireplace hearth to the centre of the termination and the horizontal run from the fireplace flue collar to the wall flange of the termination. Plot on the Venting Graph **Figure 16** with an 'X'.

If the 'X' falls on or above the top boundary of the shaded area, the installation is acceptable.

### Example A: (Acceptable Installation)


If the vertical dimension from the hearth is 60" and the horizontal run to the wall flange of the vent termination is 24", this would be an acceptable installation.

### Example B: (Acceptable Installation)

If the vertical dimension from the hearth is 78" and the horizontal run to the wall flange of the vent termination is 60", this would be an acceptable installation.

### Example C: (Unacceptable Installation)

If the vertical dimension from the floor of the fireplace is 60" and the horizontal run to the wall flange of the vent termination is 120", this would **NOT** be an acceptable installation.

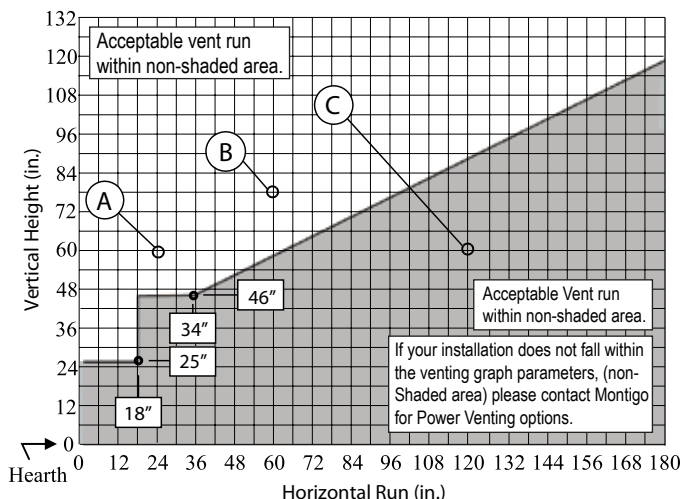

**Figure 16. H34DL\* Rear Vent Venting Graph for wall mounted terminations, See Figures 18a & 18b.**

## The Venting Graph: H38DL\*

Measure the vertical height from the fireplace hearth to the centre of the termination and the horizontal run from the fireplace flue collar to the wall flange of the termination. Plot on the Venting Graph **Figure 17** with an 'X'.

If the 'X' falls on or above the top boundary of the shaded area, the installation is acceptable.

### Example A: (Acceptable Installation)


If the vertical dimension from the hearth is 84" and the horizontal run to the wall flange of the vent termination is 36", this would be an acceptable installation.

### Example B: (Acceptable Installation)

If the vertical dimension from the hearth is 108" and the horizontal run to the wall flange of the vent termination is 144", this would be an acceptable installation.

### Example C: (Unacceptable Installation)

If the vertical dimension from the floor of the fireplace is 72" and the horizontal run to the wall flange of the vent termination is 108", this would **NOT** be an acceptable installation.

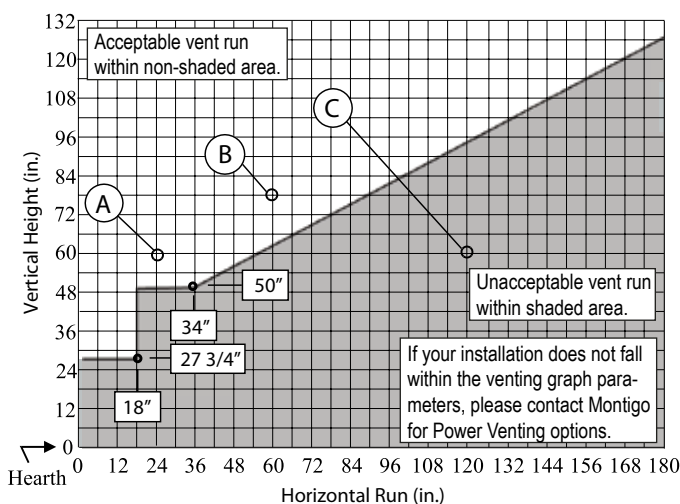

**Figure 17 H38DL\* Rear Vent Venting Graph for wall mounted terminations, See Figures 18a & 18b.**



# Installation



## The Venting Graph: H42DL\*

Measure the vertical height from the fireplace hearth to the centre of the termination and the horizontal run from the fireplace flue collar to the wall flange of the termination. Plot on the Venting Graph **Figure 18** with an 'X'.

If the 'X' falls on or above the top boundary of the shaded area, the installation is acceptable.

### Example A: (Acceptable Installation)


If the vertical dimension from the hearth is 84" and the horizontal run to the wall flange of the vent termination is 36", this would be an acceptable installation.

### Example B: (Acceptable Installation)


If the vertical dimension from the hearth is 108" and the horizontal run to the wall flange of the vent termination is 144", this would be an acceptable installation.

### Example C: (Unacceptable Installation)


If the vertical dimension from the floor of the fireplace is 72" and the horizontal run to the wall flange of the vent termination is 108", **this would NOT be an acceptable installation.**

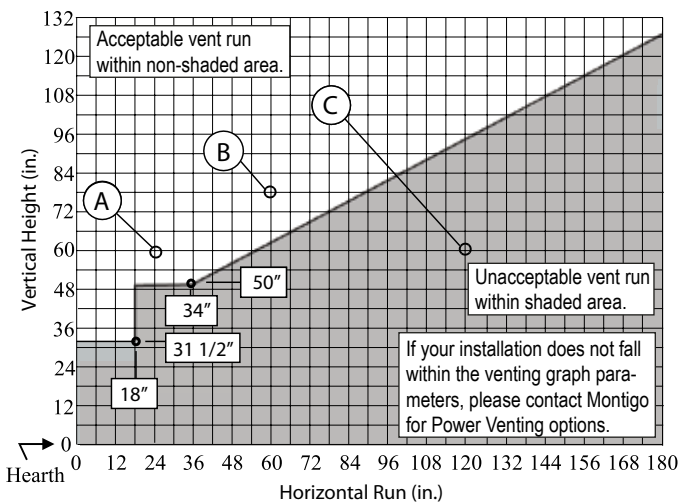

**Figure 18 H\*42DL\* Rear Vent Venting Graph for wall mounted terminations, See Figures 18a & 18b.**

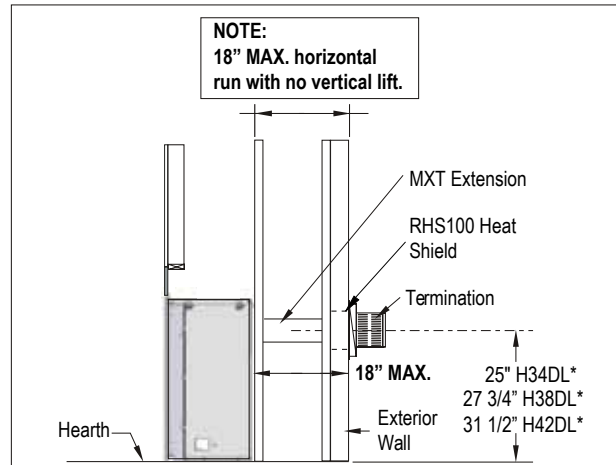

**Figure 18a. Straight run, Rear Vented, wall mounted termination for H\*DL\* models, Figure 16, 17 & 18.**

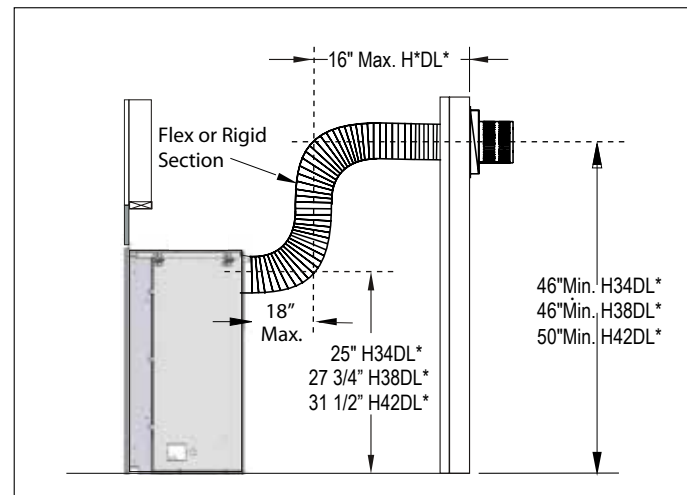

**Figure 18b. Rear Vented, wall mounted Multi-elbow termination installation. Installation for H34DL\* & H38DL\* must have a minimum vertical rise of 46". The Installation for H42DL\* must have a minimum vertical rise of 50". The vent run must comply with the Venting Graph for Rear vent, wall mounted terminations, Figures 16, 17 & 18.**





# Installation

## 45° Corner Installation.

Attach an MEL-45 / PEL-45 (45° elbow) directly onto the flue collar. Cut the MXT-20 / PXT-20 to suit, and attach it to the MEL-45 / PEL-45. Slide the fireplace into position and attach to the termination.

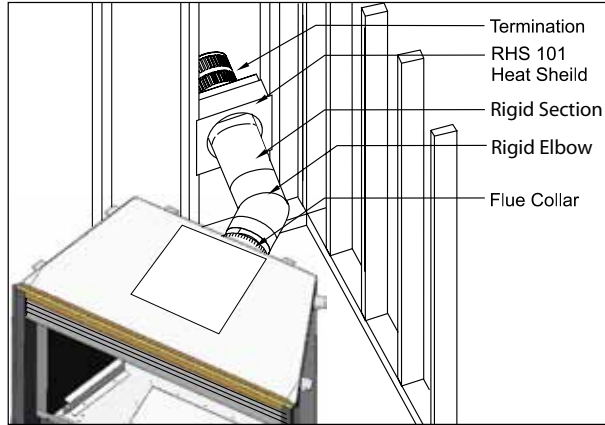


Figure 18c. Corner installation.

## 45° or less Corner Installation.

Use an MTO-4 / PTO-4 termination and an MFL-1 / PFL-1 or MFL-2 / PFL-2 (12" or 24" compressed length) and a frame, if appropriate. Flex may be turned to obtain desired degree of angle required but must not exceed 45°.

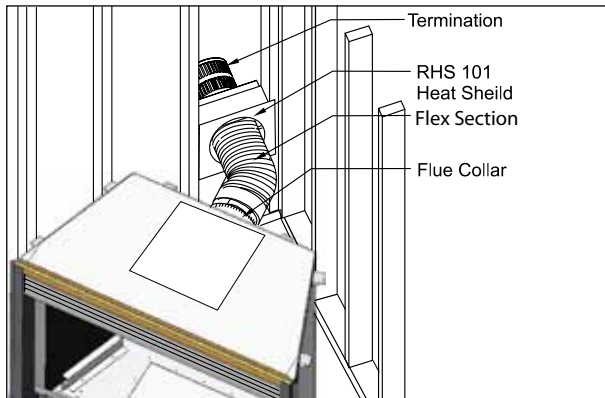


Figure 18d. Flex installation. (NG Models Only)

**Note:** Through the wall venting kits are also available for both the Straight and the Corner Installation. The Kit includes a heat shield, a MFL-12 (f/f) / PFL-12 (f/f) flexible pipe, and a termination with or without a mounting frame.

# Installation



## Section 3-3-2: VENTING COMPONENTS

The following components and associated Montigo part numbers are available for installation of a Wall Mounted Termination. Use only Montigo Vent Components. Use of non-Montigo parts will void the warranty and may impede operation of the fireplace.

	4" / 7" Venting	5" / 8" Venting
A - Termination	MTO-4 (3" Length) MTO-4F (3" Length)	PTO-4 (3" Length) PTO-4F (3" Length)
B - Frame Kits	MSR (Stucco Frame) MOSR (Stucco Frame) BSR-4 (4" Brick Frame) BSR-6 (6" Brick Frame)	MSR (Stucco Frame) MOSR (Stucco Frame) BSR-4 (4" Brick Frame) BSR-6 (6" Brick Frame)
C - Flex Sections	MFL - 1 (12" f/f Section) MFL - 18 (18" f/f Section) MFL - 2 (24" f/f Section) MFL - 3 (36" f/f Section) MFL - 4 (48" f/f Section) MFL - 6 (72" f/f Section)	PFL - 1 (12" f/f Section) PFL - 18 (18" f/f Section) PFL - 2 (24" f/f Section) PFL - 3 (36" f/f Section) PFL - 4 (48" f/f Section) PFL - 6 (72" f/f Section)
D - Rigid Sections	MXT - 5 (5" f/f Section) MXT - 10 (10" f/f Section) MEXT - 1 (12" f/f Section) MXT - 20 (20" f/f Section) MEXT - 2 (24" m/f Section) MEXT - 3 (36" m/f Section) MEXT - 4 (48" m/f Section) MEXT - 6 (72" m/f Section)	PXT - 5 (5" f/f Section) PXT - 10 (10" f/f Section) PEXT - 1 (12" f/f Section) PXT - 20 (20" f/f Section) PEXT - 2 (24" m/f Section) PEXT - 3 (36" m/f Section) PEXT - 4 (48" m/f Section) PEXT - 6 (72" m/f Section)
E - Elbows	MEL-90MM (m/m 90° Elbow) MEL-90FF (f/f 90° Elbow) MEL-90FM (f/m 90° Elbow) MEL-45FM (f/m 45° Elbow)	PEL-90MM (m/m 90° Elbow) PEL-90FF (f/f 90° Elbow) PEL-90FM (f/m 90° Elbow) PEL-45FM (f/m 45° Elbow)

Connection and installation of the vent components should adhere to the following guidelines:

- Use any combination of rigid and Flex pipe as required.
- Flex sections may be stretched up to 50% of their total length (e.g. a 24" section maybe stretched to 36").
- Connect all vent sections using a minimum of three sheet metal screws on the outer pipe flue..
- Ensure the pipe ends male to female slide in a minimum of 1 1/2" of overlap.
- Ensure all runs are supported with a minimum of 3 supports per 10' of venting.
- When hanging/ supporting venting, ensure that 1" clearance is maintained on sides and bottom of vent runs and 2" above horizontal vent runs to any combustible material.
- Ensure when cutting sections of rigid pipe to maintain integrity of internal supports.
- Place the springs, supplied with the pipe kit, between the outer and inner pipes to keep the pipes separate and avoid any possible hot spots.
- Montigo recommends the use of a flex section for the final pipe connected directly to the fireplace offering greater flexibility of installation and absorption of movement.

- When penetrating a combustible ceiling, a ceiling firestop must be used.
- Montigo recommends that all exterior corners and joints be sealed with exterior caulking however we encourage you to consult your Building Envelope Engineer or Waterproofing Consultant for further recommendations.

### IMPORTANT:

Please Refer to your Building Envelope Engineer or Waterproofing Consultant for a review of ALL penetrations through exterior walls or the roof.




# Installation

## Section 3-3-3: Heat Shields


### Installing a Wall Mounted RHS8 Heat shield

The RHS8 Heat shield **CANNOT** be used when the Termination is **WITHIN** (36" Min. horizontal and 39" Min. vertical) from the fireplace, or directly off the rear of the fireplace, as shown **figure 19a**. The RHS101 Heat Shield (**Figure 19c and 19d**) **MUST** be used within the noted dimensions.

To install the RHS8, frame an opening in combustible construction, **Figure 19** below. Slide the Heat shield in place over the vent pipe which attaches to the fireplace. After the fireplace and vent pipe has been installed, clearances should match the dimensions in **Figure 19**.

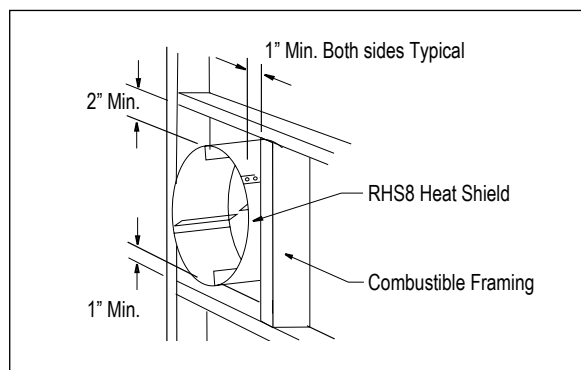

**Figure 19.** RHS8 Installation. (Install by sliding over vent pipe where it passes through the combustible construction).

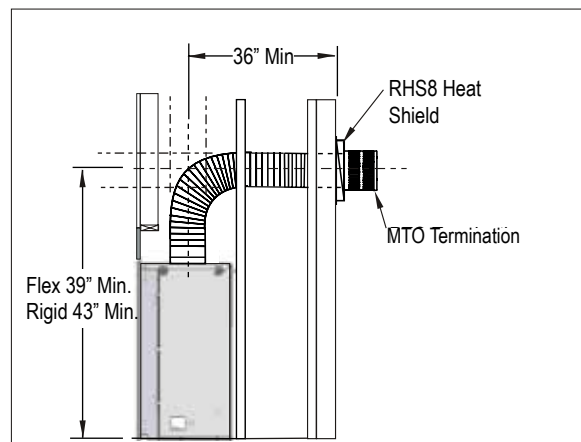

**Figure 19a.** RHS8 Installation. (Minimum requirements).

### Installing a Wall Mounted RHS101 Heat shield.


The RHS101 Heat shield **MUST** be used where the RHS8 Termination (**Figure 19 and 19a**) **CANNOT** be used. **Use the RHS100 where any of the dimensions are within the parameters shown, figure 19a.**

To install the RHS100, Slide the Inner Section over the vent pipe that will connect to the fireplace. Fasten the vent pipe to the back of the fireplace with a Min. of three sheet metal screws.


(Note: ensure you **DO NOT EXCEED** the Max. 18" fireplace clearance).

Next, slide the RHS100 outer section from the outside of the structure, see **Figure 19c**.

To complete the installation fasten the Heat Shield Outer Section & Termination frame to the structure **Figure 19d**.

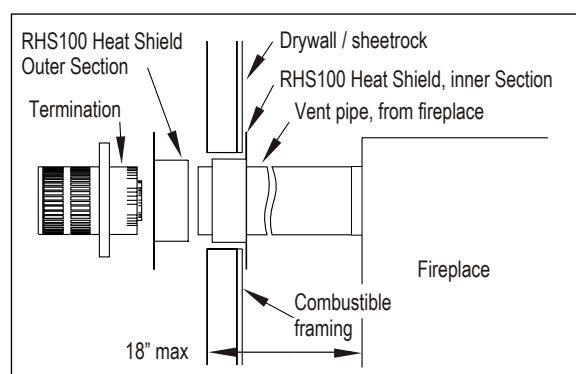

**Figure 19c.** RHS101 Installation. (Install by sliding Outer Section over vent pipe where it passes through the combustible construction).

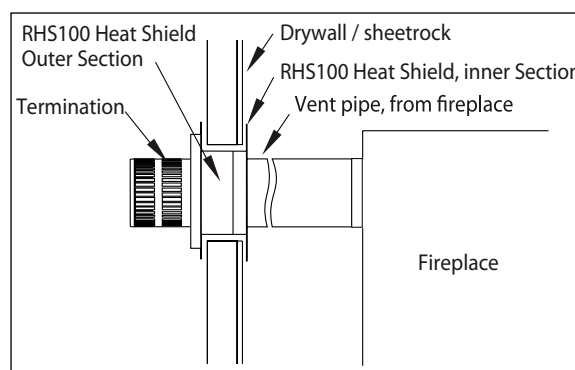


**Figure 19d.** Heat Shield. After sliding the outer section in place.

# Installation




## Section 4: *Wiring*

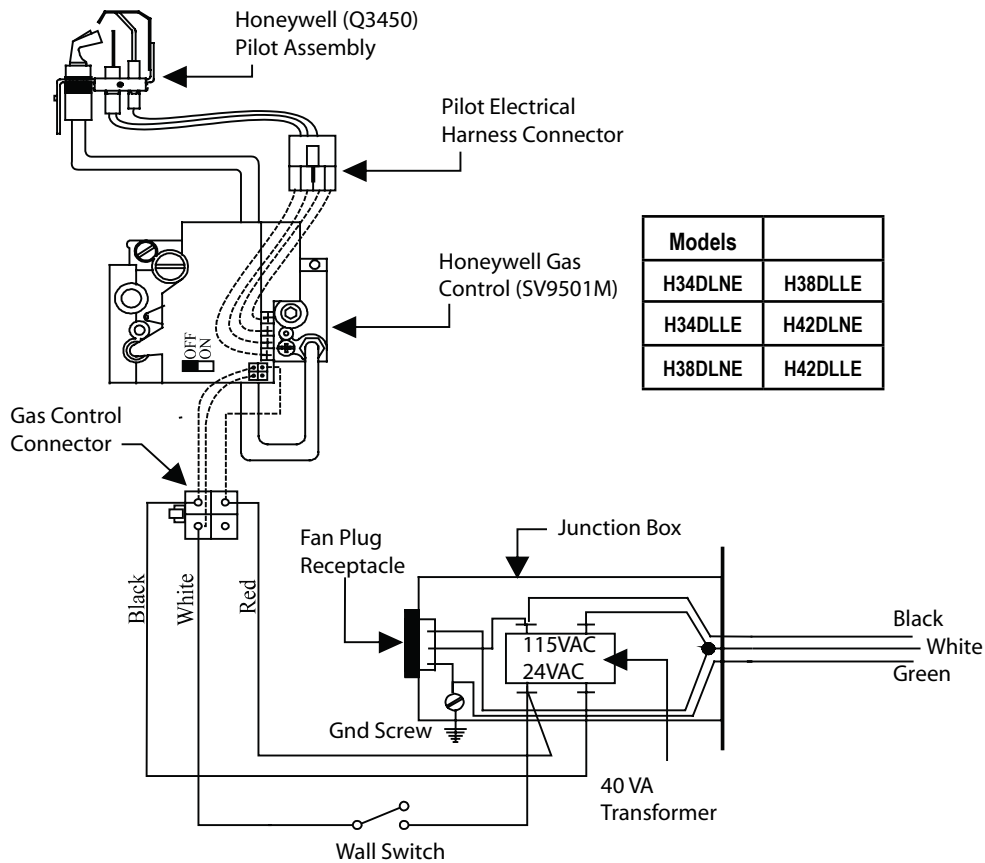

**Figure 20.** *Wiring with Honeywell gas control and pilot.*

Models	
H34DLNI	H38DLLI
H34DLLI	H42DLNI
H38DLNI	H42DLLI

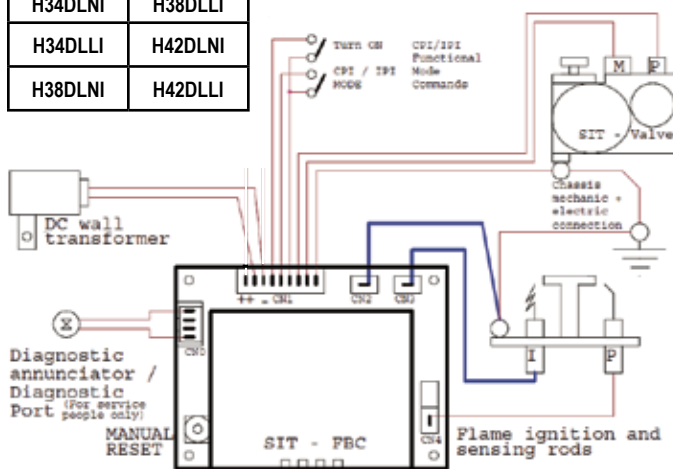

**Figure 21. Wiring for the SIT IPI Wiring Schematic**

### Wiring for the *optional* Fan Kit


All **H\*DL\*** fireplaces may be equipped with optional fan kits for circulating heat into the living space.

**Installations in Canada** which employ the fans must be electrically grounded in accordance with **CSA C22.1** Canadian Electrical Code Part 1 and/or Local Codes.

**Installations in the USA** which employ the fans must be grounded in accordance with local codes or, in the absence of local codes, with the National Electrical Code, **ANSI/NFPA 70-1987**.

For more information see the **Fan Kit Installation Guide** included with the fan kit.

**NOTE:** If any of the original wire supplied with the appliance is replaced, it must be replaced with the same type, or its equivalent.

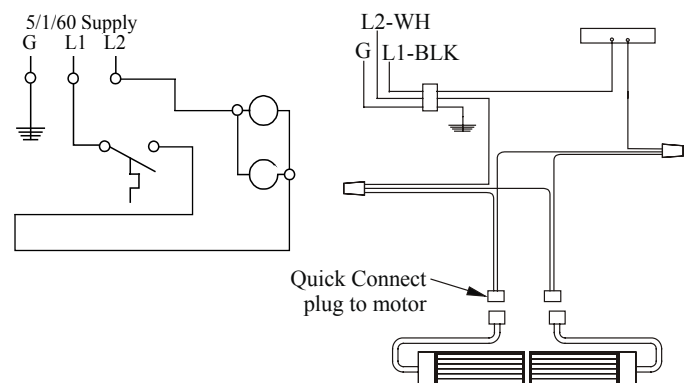

**Figure 21a.** *Wiring schematic for optional fans.*



# Installation

## Section 5: Installing the Gas line

### Section 5-1: FUEL CONVERSION

- Verify that your fireplace is compatible with your available gas type. (Natural Gas or Propane shown by "N" or "L" in your model number)
- If gas type is not compatible, contact your local Montigo representative to purchase a conversion kit.
- Conversion kits must be installed by a qualified service technician.

### Section 5-2: GAS PRESSURE


- Optimum appliance performance requires proper input pressures.
- Gas line sizing requirements will be determined in ANSI Z221.3 National Fuel Gas Code in the USA and CAN/CGA B149 in Canada.
- Pressure requirements are:

Gas Pressure	Natural Gas	Propane
Minimum inlet pressure	5.5in. w.c.	11in. w.c.
Manifold pressure	3.5in. w.c.	10in. w.c.

- The manifold outlet pressure is set from the factory to the appropriate pressure but should be verified.
- To check pressures, control valves have a provision to remove a 1/8" N.P.T. plug to be fitted with a hose barb.
- Montigo requires a service shut off valve be located in an accessible location to isolate the gas supply.
- Only install gas shut-off valves approved for use by the state, province, or other governing body in which the fireplace is being installed.

### Section 5-3: GAS CONNECTION

- See **Figure 22** below for location of gas line access.
- Flexible gas connectors must not exceed 3 feet in length, unless allowable within local regulations.
- Connect incoming gas line to the 1/2" or 3/8" gas inlet port.
- Purge all air out of gas line.
- Check appliance connection, valve and valve train under normal operating pressure with a commercially available leak check solution.
- **DO NOT USE A FLAME OF ANY KIND TO TEST FOR LEAKS.**

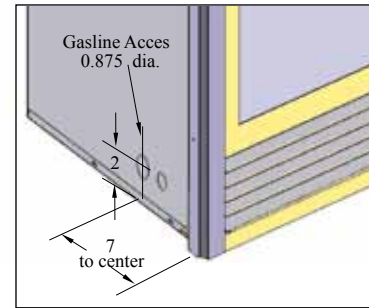

**Figure 22.** Gas line access.

**Note:** After gas line is connected, **each appliance connection, valve and valve train** must be checked while under normal operating pressure with either a liquid solution, or leak detection device, to locate any source of leak. Tighten any areas where bubbling appears or leak is detected until bubbling stops completely or leak is no longer detected. **DO NOT use a flame of any kind to test for leaks.**



## WARNING!

When pressure testing the fireplace, Gas line, and input system follow the appropriate local codes or your area. **DO NOT** connect the fireplace to pressures in excess of 1/2lb. This will damage the gas control valve.

# Installation



## Section 6: Finishing


### Finishing Around the Fireplace

Combustible mantels and mouldings may be safely installed over the top and on the front of the fireplace provided that they do not project beyond shaded area shown in **Figure 24**.

### Fireplace Facing

When sizing the finish material for your fireplace, it is important to remember the following: **THE OPENING MUST NOT BE OBSTRUCTED IN ANY WAY - to do so restricts the air supply for the control compartments and heat exchanger it also prevents access for servicing controls.**

The face of the fireplace may be painted to match the room decor, provided you use a heat-resistant paint. Decorative facing must not extend past the fireplace opening at all, because it will interfere with the access to retainers for removal of glass door.

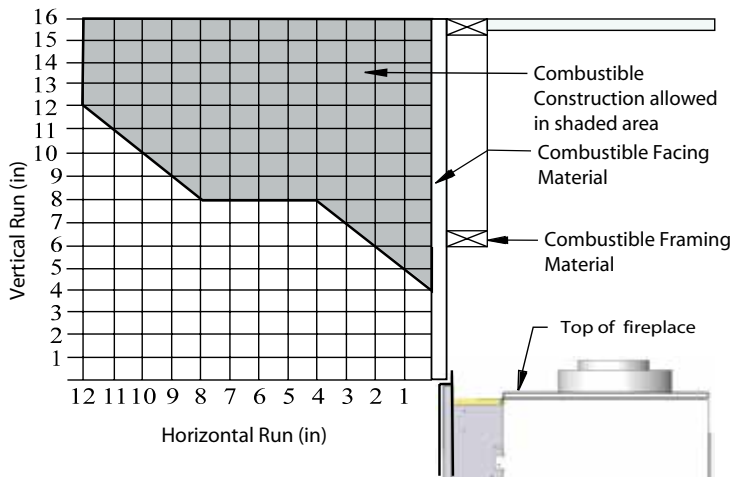

**Figure 24.** Combustible mantels and facings.



### WARNING!

We recommend careful consideration be given to the effects of elevated mantel temperatures which may be in excess of product design, for example: candles, plastic or pictures. This can cause melting, deformation, discoloration or premature failure of T.V. radio, and other electronic components.



### WARNING!

When covering the upper metal portion of the fireplace, up to 4" (as shown, **Fig.24**) with a non-combustible material **Please Note:** The decorative facing materials may be subject to temperatures in excess of 250° F. This should be considered when selecting facing materials.



### WARNING!

Do not attempt to clean glass when hot.  
Do not clean glass with abrasive materials as any glass etching may cause premature glass failure.



### CAUTION!

**DO NOT OPERATE THIS FIREPLACE WITHOUT THE GLASS DOOR OR WITH A BROKEN GLASS DOOR.**





# Installation

## Section 7: Installing & Removing the Door

### Removing the door:

The H\*DL\* Series door is removed in a few simple steps. Follow these below to remove the Horizontal access panel, unlatch the door buckles and, remove the door. Replace in reverse order.

### Remove the Horizontal Access Panel:

#### Step 1: Remove the Horizontal Access Panel:

Remove the Horizontal cover by placing fingers in both finger holes, then pushing away from you and lifting out. Place it aside during maintenance or cleaning. Install in reverse order.



Figure 26d. Removing and installing the Horizontal Access Panel

#### Step 2: Locate the Door Buckles:

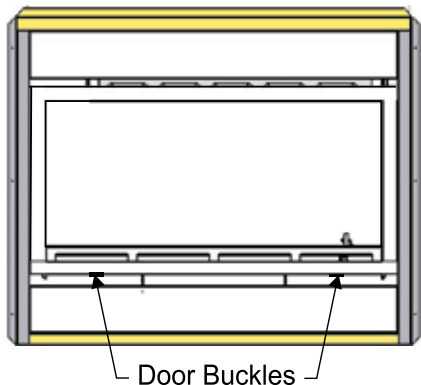


Figure 26a. Locate the door buckles. (Both Sides Typical)

#### Step 3: Release the Door Buckles



Figure 26b. Door buckle Tool

#### Step 4:

Firmly grasp hand-hold end of Door buckle tool and place the machined end in the slot under door frame. (as shown)



Figure 26c.

#### Step 5:

Ensure the tool is firmly in the lower end of the slot, (as shown), Then pull toward you (Caution: hold the tool securely).

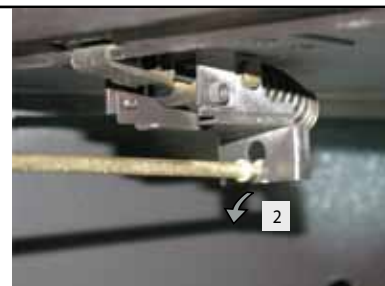


Figure 26d.

#### Step 6:

Pull hard if necessary to release the spring tension. (Caution: The latch springs back with force, hold the tool securely).



Figure 26e.

#### Step 7:

Remove the tool from the latch slot. Ensure the latches are hanging freely, the hook end is released from the bottom of the door. (Repeat all 4-steps for the remaining latches).

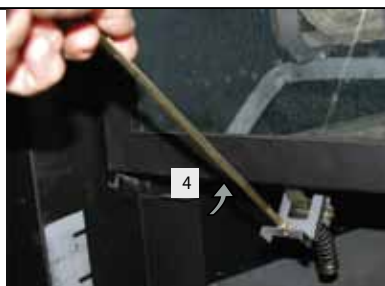


Figure 26f.

### Step 8: Removing the Door:

Grasp the Door on either side, usually midway and lift upward, lift the door carefully up and away from the front of the fireplace. See **Figures 26g**. Place the Door aside in a safe place while maintenance and / or cleaning is being performed.

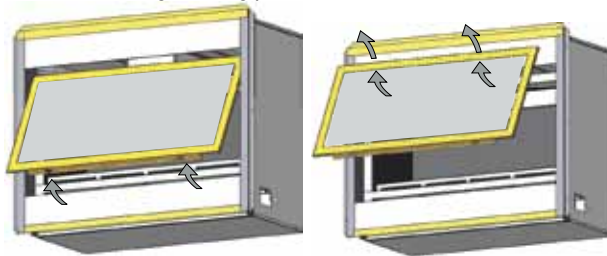


Figure 26g. Removing and installing the glass doors. (Both Sides Typical)

### Installing the Door:

To install the door, hook the top edge of the door frame into place. Lower the door into position and follow the previous steps shown in reverse order.

# Installation




## Section 8: Installing the Accessories

### Installing the Logs:


The H34DL\* is supplied with five ceramic fibre logs. Unpack the logs and handle them very carefully.

1. Remove the glass door as described on **Page 21**.

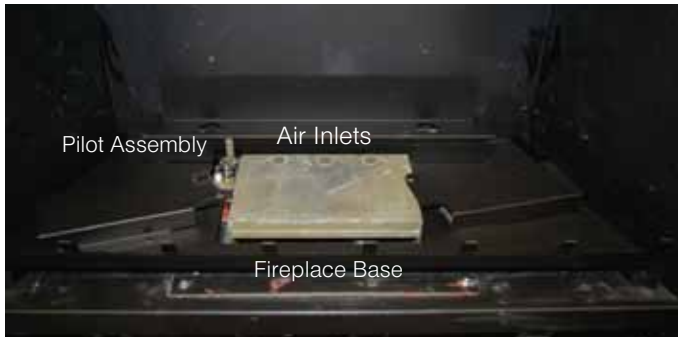


**Figure 29a.** H34DL\*s Fireplace Base.

2. Install Bottom Rear log as shown in **Figure 29b**.

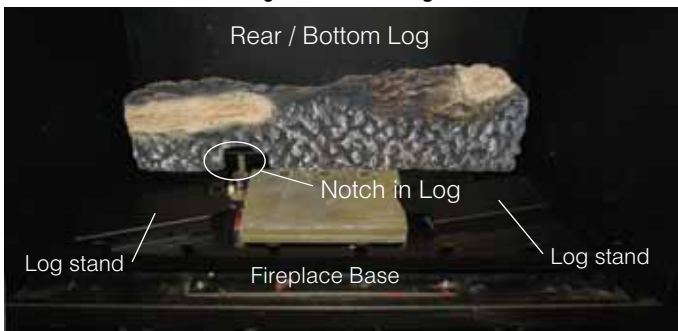


**Figure 29b.** Bottom/Rear log placement.

3. Install Both front base logs, (**Figure 29c**) on the log stands provided. See **Figure 29b**.

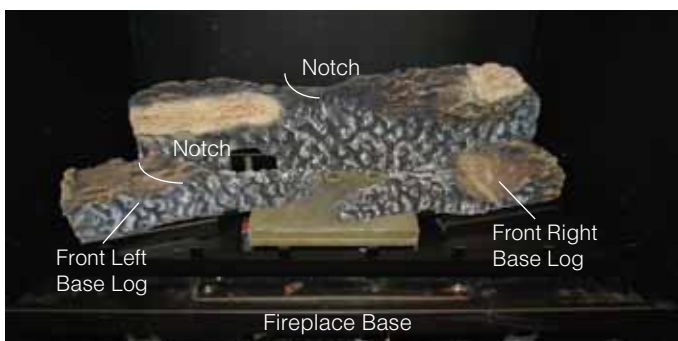


**Figure 29c.** Front base logs placement.

4. Place the top left log as shown in **figure 29d**. A flat area is provided on the front left log, and a notch in the Rear bottom log, as shown in **figure 29c**.

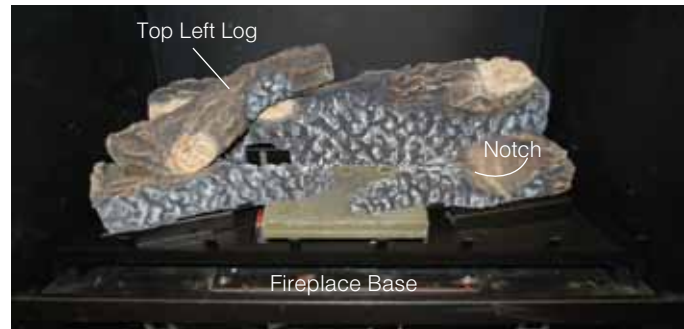

**Figure 29d.** Top Left log placement.

5. Place the top right log as shown in **figure 29e**. A notch is provided on the front right log, and a impression in the Rear bottom log.

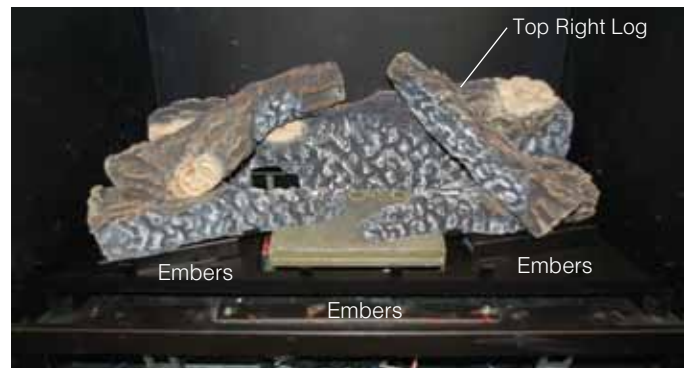

**Figure 29e.** Top right log placement.

6. Start the fireplace. If the flame appears satisfactory, replace the glass door. If the flame does not appear satisfactory, double-check the air inlet and exhaust outlet pipe to ensure that they are unobstructed.

### **CAUTION!**

If logs are not placed properly, excessive sooting will result. The surface of the logs will crack due to the heat from the flames. This is a normal occurrence.




# Installation

## Installing the Logs:


The H38DL\* and H42DL\* is supplied with a seven ceramic fibre log logset. Unpack the logs and handle them very carefully.

**Step 1.** Remove the glass door as described on **Page 21**.

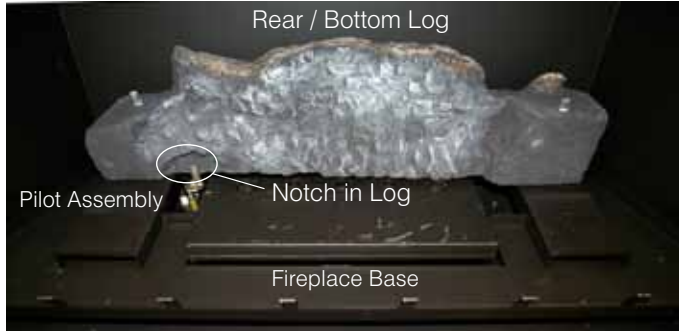

**Figure 30a.** Placing Bottom Rear Log.

**Step 2.** Place the bottom Rear log as shown in **figure 30a**.

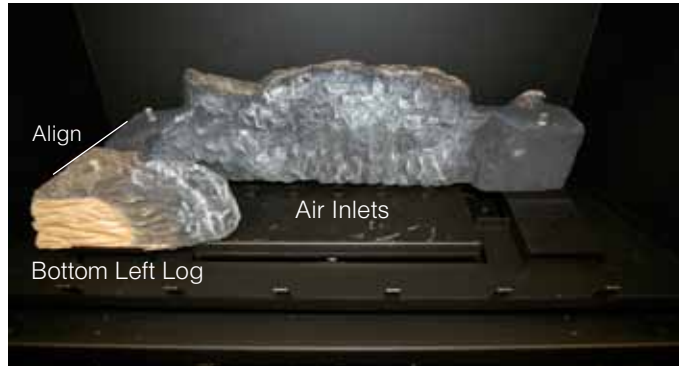


**Figure 30b.** Placing Bottom Left Log.

**Step 3.** Place the bottom Left log as shown in **figure 30b**.



**Figure 30c.** Placing Bottom Right Log.

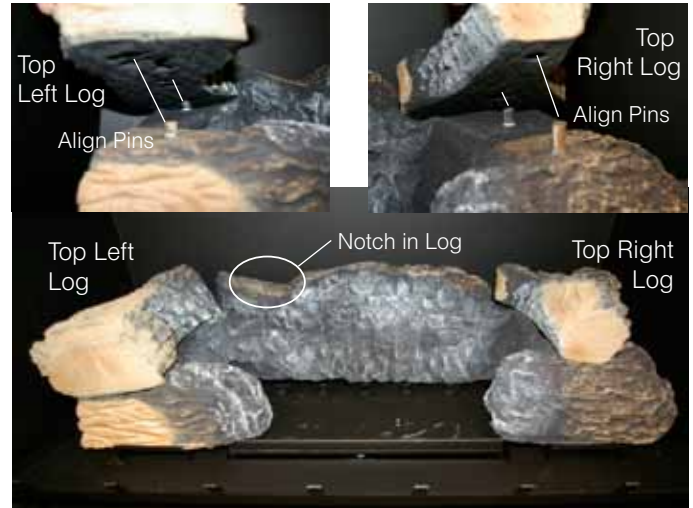

**Figure 30d.** Placing Top Right and Left Logs.

**Step 4.** Place the bottom Right log as shown in **figure 30c**


**Step 5.** Place the Top Right and Left logs using the (4) four alignment pins protruding from the top of the Right and Left Bottom Logs, as shown in **figure 30d**. With these pins align the Top Right and Left logs using the predetermined alignment holes cast into the underside of the logs, as shown above, **figure 30d** insets.

**Step 6.** Place the Centre Front log, **Figure 30e** below, as shown using the notch cast in the Bottom Rear log as shown in **figure 30d** above.



**Figure 30e.** Placing Centre Front Log.


**Step 7.** Place the Front Centre log as shown in **figure 30e**.

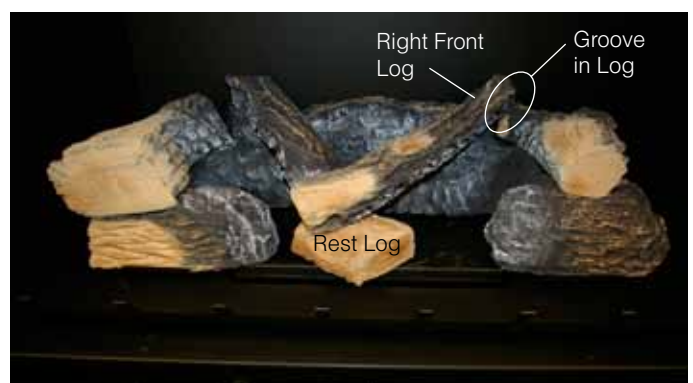

**Figure 30f.** Placing Right Front Log.



# Installation

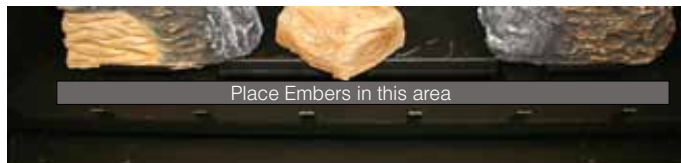


**Figure 30g.** *Placing Embers.*

**Step 9.** Place the Embers as shown in **figure 30g**.

Arrange the ember chips on top of the burner tray. Care should be taken when placing the embers, as blocked burner ports may cause an incorrect flame pattern, carbon deposits and delayed ignition. Also, the embers must never be placed in a way that obstructs any of the air inlet ports, located at the rear of the burner, as shown in **figure 30b**.


## Installing the Horizontal Louvres:

1. Ensure the fireplace is turned off before beginning installation.
2. Install the upper louvre assembly as shown in figure 31a. Before tightening the screws fully, adjust the louvre assembly so that it is centred horizontally and vertically.

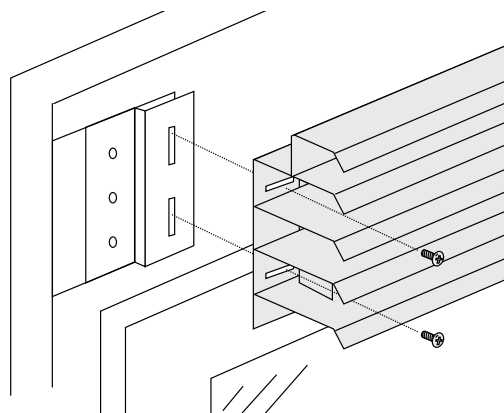

**Figure 31a.** *Installing the upper louvre assembly*

3. Install the lower louvre assembly. Line up the slots on each side of the bottom louvre with the hinge tabs at the base of the fireplace as shown in figure 31b.

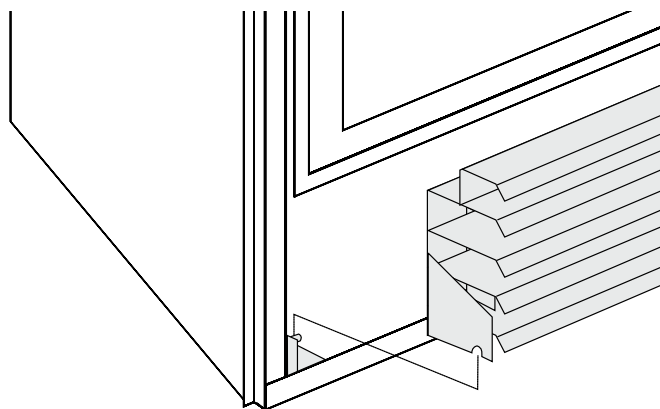

**Figure 31b.** *Installing the lower louvre assembly*



# Operation

## Section 9: Start-up Sequence

with Continuous Pilot

Models		H38DLL
H34DLN	H34DLM	H42DLN
H34DLL	H38DLN	H42DLL

## For Your Safety - READ BEFORE LIGHTING:

### **WARNING!**



If you do not follow these instructions exactly, a fire or explosion may result causing property damage, personal injury or loss of life.

- This appliance has a pilot which must be lighted by hand. When lighting the pilot, follow these instructions exactly.
- BEFORE LIGHTING** smell all around the appliance area for gas. Be sure to smell next to the floor because some gas is heavier than air and will settle on the floor.

#### What To Do If You Smell Gas:



- Do not try to light any appliance.
- Do not touch any electrical switch; do not use any phone in your building.
- Immediately call your gas supplier from a neighbour's

phone. Follow the gas supplier's instructions.

- If you cannot reach your gas supplier, call the Fire Department.


- Use only your hand to push in or turn the gas control knob. Never use tools. If the knob will not push in or turn by hand, don't try to repair it, call a qualified service technician. Force or attempt to repair may result in a fire or explosion.
- Do not use this appliance if any part has been under water. Immediately call a qualified service technician to inspect the appliance and to replace any part of the control system, and any gas control which has been under water.


## Lighting Instructions:

- STOP!** Read the safety information above on this label.
- Lift out the lower Horizontal access panel.
- Push in gas control knob and turn clockwise  to "OFF."
- Wait five (5) minutes to clear out any gas. Smell for gas, including near the floor. If you then smell gas, **STOP!** Follow "B" in the safety information above on this label. If you don't smell gas, go to the next step.
- Locate pilot burner (See illustration at right.) and follow steps below.
- Turn knob on gas control counter clockwise  to "PILOT."
- Push in gas control knob completely and hold. Light with Piezo

Igniter button. Continue to hold the control knob in for about (1) minute after the pilot is lit. Release the knob and it will pop back up. Pilot should remain lit. If it goes out repeat steps 3 through 8.


- If knob does not pop up when released. Stop and immediately call your service technician or gas supplier.
- If the pilot will not stay lit after several tries, turn the gas control knob to "OFF" and call your service technician or gas supplier.

- Push in gas control knob and turn counter-clockwise  to "ON."
- Replace the lower Horizontal access panel.
- Turn on remote switch to ignite fire.

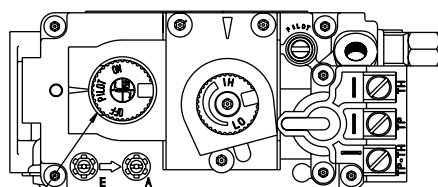


Gas Control Knob  
(Shown in "Pilot" position.)

**NOTE:** Gas control knob cannot be turned from "PILOT" to "OFF" unless knob is pushed in slightly. Do not force.

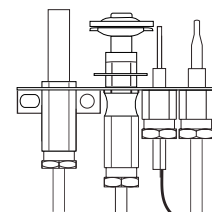

## To Turn Off Gas To Appliance:

- Turn off remote switch.
- Lift out the lower Horizontal access panel.
- Push in gas control knob slightly and turn  clockwise to "Off". Do not force.
- Replace the lower Horizontal access panel.

## Operation



*with Honeywell Electronic Ignition*

Models		
H34DLNE	H38DLNE	H42DLNE
H34DLLE	H38DLLE	H42DLLE

### For Your Safety - READ BEFORE LIGHTING:

#### **WARNING!**



If you do not follow these instructions exactly, a fire or explosion may result causing property damage, personal injury or loss of life.

- A. This appliance is equipped with an ignition system that lights the pilot burner automatically. **Do not attempt to light the pilot by hand.**
- B. **BEFORE LIGHTING** smell all around the appliance area for gas. Be sure to smell next to the floor because some gas is heavier than air and will settle on the floor.

#### **What To Do If You Smell Gas:**

- Do not try to light any appliance.
- Do not touch any electrical switch; do not use any phone in your building.
- Immediately call your gas supplier from a neighbour's phone. Follow the gas supplier's instructions.


■ If you cannot reach your gas supplier, call the Fire Department.

- C. Use only your hand to push in or turn the gas control knob. Never use tools. If the knob will not push in or turn by hand, don't try to repair it, call a qualified service technician. Force or attempt to repair may result in a fire or explosion.
- D. Do not use this appliance if any part has been under water. Immediately call a qualified service technician to inspect the appliance and to replace any part of the control system, and any gas control which has been under water.

### Lighting Instructions:

1. **STOP!** Read the safety information above on this label.
2. Flip down the lower trims.
3. Turn switch on the gas control to "OFF".
4. Wait 5 minutes to clear out any gas. If you smell gas, **STOP!** Follow "B" in the safety information above on this label. If you don't smell gas, go to the next step.
5. Turn switch on the gas control to "ON". **NOTE:** This unit is equipped with an ignition system that lights the pilot burner automatically. **Do not attempt to light the pilot by hand.**
6. Turn on wall switch.
7. Flip up the lower trim.

8. If the fireplace does not operate, follow the instructions "To Turn Off Gas To Appliance" and call your service technician or gas supplier.

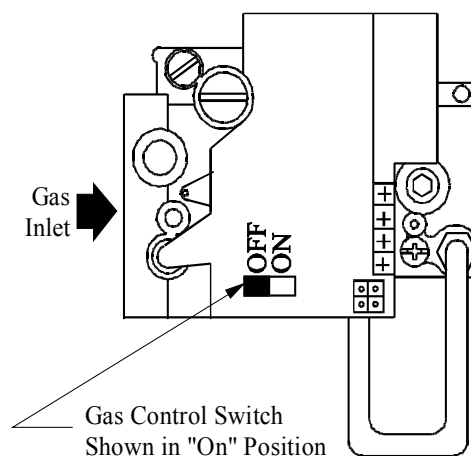

### To Turn Off Gas To Appliance:

1. Turn off remote switch.
2. Flip down the lower trim.
3. Turn the switch on the gas control to "Off".
4. Flip up the trim.





# Operation

## Proflame SIT Electronic Ignition

Models		
H34DLNI	H38DLNI	H42DLNI
H34DLLI	H38DLLI	H42DLLI

## For Your Safety - READ BEFORE LIGHTING:

### WARNING!



If you do not follow these instructions exactly, a fire or explosion may result causing property damage, personal injury or loss of life.

- This appliance is equipped with an ignition system that lights the pilot burner automatically. Do not attempt to light the pilot by hand.
- BEFORE LIGHTING smell all around the appliance area for gas. Be sure to smell next to the floor because some gas is heavier than air and will settle on the floor.

What To Do If You Smell Gas:

- Do not try to light any appliance.
- Do not touch any electrical switch; do not use any phone in your building.
- Immediately call your gas supplier from a neighbour's

phone. Follow the gas supplier's instructions.

- If you cannot reach your gas supplier, call the Fire Department.



- Use only your hand to push in or turn the gas control knob. Never use tools. If the knob will not push in or turn by hand, don't try to repair it, call a qualified service technician. Force or attempt to repair may result in a fire or explosion.
- Do not use this appliance if any part has been under water. Immediately call a qualified service technician to inspect the appliance and to replace any part of the control system, and any gas control which has been under water.

## Lighting Instructions:

- STOP! Read the safety information above on this label.
- Remove the lower Horizontal access panel.
- Turn Incoming gas valve to the "ON" position.
- Wait 5 minutes to clear out any gas. If you smell gas, STOP! Follow "B" in the safety information above on this label. If you don't smell gas, go to the next step.
- Turn wall switch "ON".
- If the Fireplace does not light, the System will cycle through

two trials, (one minute audible clicking, thirty seconds of silence, and then another one minute of audible clicking).

- After completion of the information in the Troubleshooting section, Repeat step 5.
- If the system will not function correctly, follow the instructions "To Turn Off Gas To Appliance" and call your service technician or gas supplier.

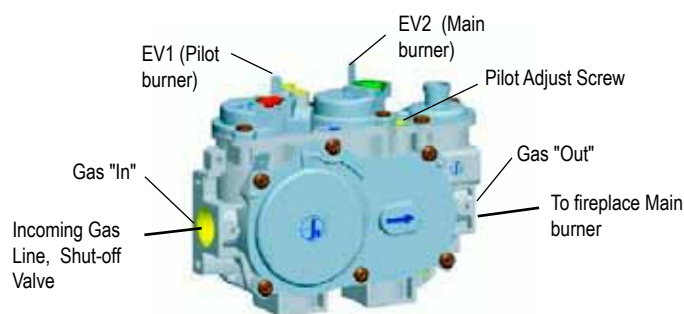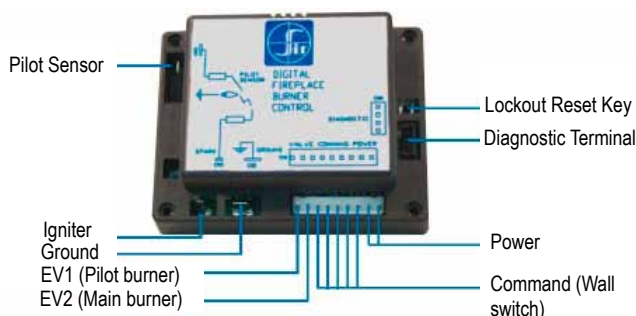

## To Turn Off Gas To Appliance:

- Turn off remote switch.
- Remove the lower Horizontal access panel.
- Turn the incoming gas control valve to "Off".
- Replace the lower Horizontal access panel.

# Maintenance



## Lighting Instructions

See pages 25 to 27.

## General

- **Have the fireplace and installation inspected yearly.** The inspection must include, but is not limited to, the following:
  - A visual check of the entire vent system and termination.
  - An inspection of the explosion relief flappers and the door gasketing to ensure a proper seal.
  - An inspection of the burner, venturi, and primary air openings.
  - An inspection of the gas valve, gas components, and pilot flame. For your convenience a 1/8" manifold pressure tap is supplied on the gas valve for a test gauge connection.
  - Ensure proper log placement as per this manual.
  - Inspection of all optional equipment; fans, thermostats, etc.
- For **Natural Gas** this appliance requires a minimum inlet pressure of 5.5" W.C. and a manifold pressure of 3.5" W.C.
- For **Propane Gas** this appliance requires a minimum inlet pressure of 11" W.C. and a manifold pressure of 10" W.C.
- Always keep the fireplace area clear and free of combustible materials, as well as gasoline and other flammable vapors and liquids.
- Do not use this appliance if *any part has been under water*. Immediately call a qualified service technician to inspect the appliance and to replace any part of the control system and any gas control which has been under water.

## Cleaning

When the fireplace is first activated, there may be some smoking and a visible film may be left on the glass. This is a normal condition, and is the result of burning of protective coatings on new metal.

- Glass must be cleaned periodically to remove any film (which is a normal by-product of combustion) which may be visible. Film can easily be removed by removing the door, as shown on **Page 19**. Handle the door carefully, and clean it with non-abrasive glass cleaners. One of the most effective products is Kel Kem.
- Silicone seals on inner door during initial firing will "off gas", leaving a visual deposit of a white substance on combustion chamber walls. This can easily be removed using normal household products.
- Use a vacuum cleaner or whisk broom to keep the control compartment, burner, and firebox free from dust and lint.
- Logs may be cleaned periodically with a vacuum to remove soot or other contaminates.



## CAUTION!

- Fireplace gas control must be in the "OFF" position and pilot and main burners extinguished when cleaning appliance with a vacuum.
- Doors can get very hot. Handle only when cool.


## Hi-Lo Burner

### Adjustment:

(SIT Nova 820).

The H\*DL\* is equipped with an adjustable burner, allowing you to raise or lower the flames. To adjust the flames, locate the black knob marked 'Hi-Lo', in the centre of the gas control valve (See **Figure 32**).


- To raise the flame height, turn the black knob (located behind the lower trim) **counter-clockwise**.
- To lower the flame height, turn **clockwise**.

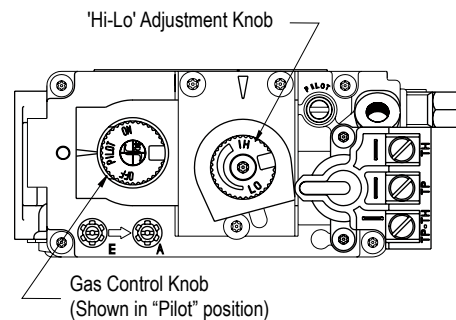


**Figure 32.** 'Hi-Lo' Adjustment on the H\*DL\* s gas valve,

### Pilot Burner Adjustment: (SIT Nova 820).

1. Locate Pilot Adjustment Screw. (See **figure 33**.)
2. Adjust pilot screw to provide properly sized flame as shown.

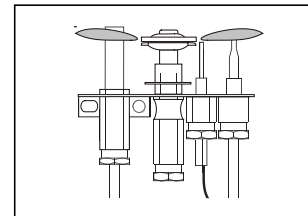

3. After installing or servicing, leak test with a soap solution with main burner on. Coat pipe and tubing joints, gasket etc. with soap solution. Bubbles indicate leaks. Tighten any areas where the bubbles appear until the bubbling stops completely.

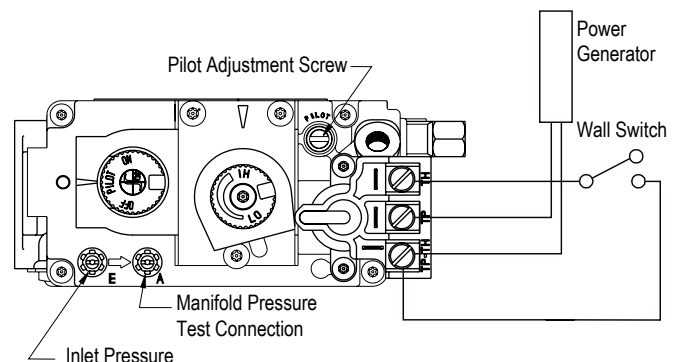

**Figure 33.** 'Pilot' Adjustment on the H\*DL\* s gas valve.



# Maintenance

## Troubleshooting:

(SIT Nova 820).

Models		H38DLL
H34DLN	H34DLM	H42DLN
H34DLL	H38DLN	H42DLL

The following is a troubleshooting chart of possible problems:


PROBLEM	CORRECTIVE ACTION
Noisy Pilot Flame	Locate pilot adjustment screw on gas control valve. Flame is decreased by turning adjustment screw clockwise.
Pilot won't ignite	Disconnect remote wires and try to light pilot. If pilot now works, remote connections are faulty. Check wiring diagram <b>figure 33</b> .
Main burner will not light	1. Check wiring (see <b>figure 33</b> ). 2. Check wall switch for proper connection.

## Troubleshooting:

(SIT - IPI Electronic)

Models		
H34DLNI	H38DLNI	H42DLNI
H34DLII	H38DLII	H42DLII

1. Locate the lead to the battery backup, (remove)  
(Refer to schematic, below)
2. Locate the AC/DC wall transformer, (Unplug connector)  
(Refer to schematic, below)

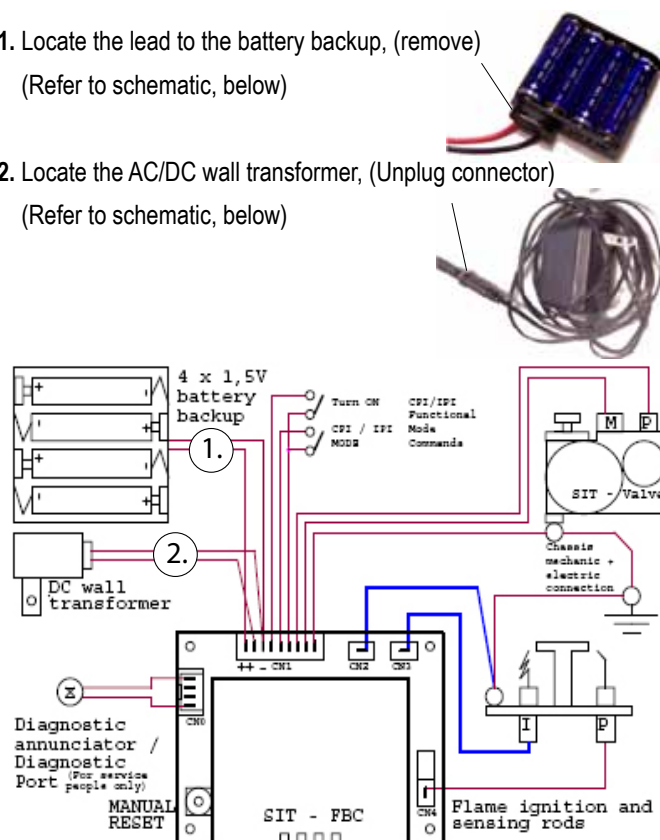

If your fireplace still does not operate correctly, consult your dealer or the manufacturer.

## Troubleshooting:


(Honeywell)

Models		
H34DLNE	H38DLNE	H42DLNE
H34DLLE	H38DLLE	H42DLLE

## HONEYWELL SV 9500 /SV9600 Troubleshooting Sequence

**NOTE:** Before Troubleshooting, Familiarize Yourself With The Startup And Checkout Procedure.

### START

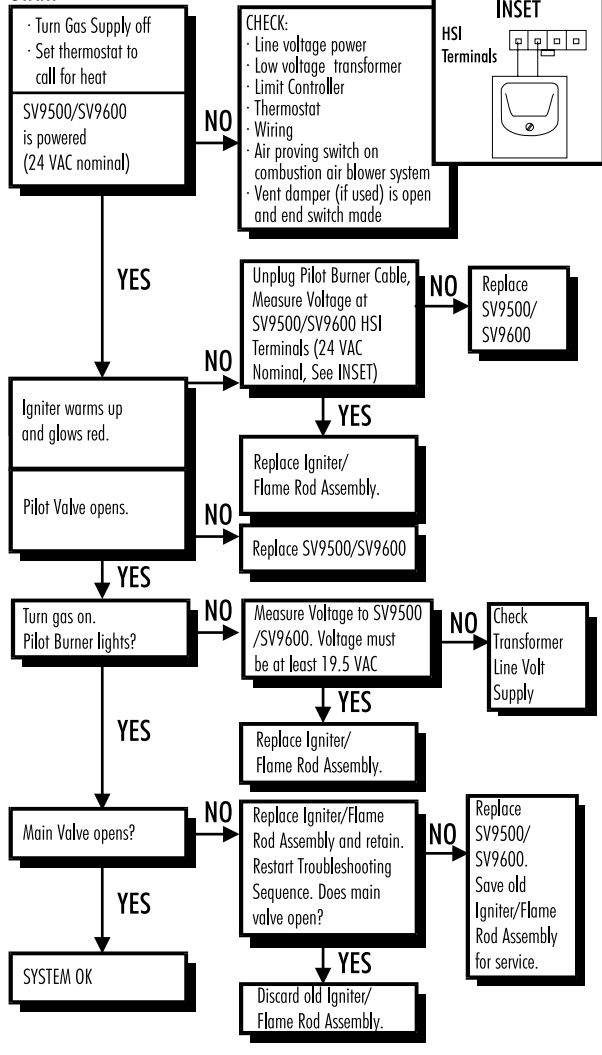

If your fireplace still does not operate correctly, consult your dealer or the manufacturer.

**All service and repairs should be performed by a qualified Technician.**

All spare parts, optional fans, and optional trim finishes are available from your local dealer or the manufacturer.


# Maintenance



## Spare Parts List

	H34DL	H38DL	H42DL
<b>NG Gas Valve</b>	RGC1006	RGC1006	RGC1006
<b>LP Gas Valve</b>	RGC1005	RGC1005	RGC1005
<b>NG Pilot</b>	RPA020	RPA020	RPA020
<b>LP Pilot</b>	RPA021	RPA021	RPA021
<b>Burner NG</b>	RBH3403	RBH3803	RBH4203
<b>Burner LPG</b>	RBH3404	RBH3804	RBH4204
<b>Orifice NG</b>	ROR1120	ROR1122	ROR1124
<b>Orifice LPG</b>	ROR1121	ROR1123	ROR1125
<b>Door</b>	RDTH34	RDTH38	RDTH42
<b>Log Set</b>	RLGSH34	RLGSH38	RLGSH42
<b>Log Base</b>	RLGSH34B	RLGSH38B	RLGSH42B

# Appendix A - Termination Locations

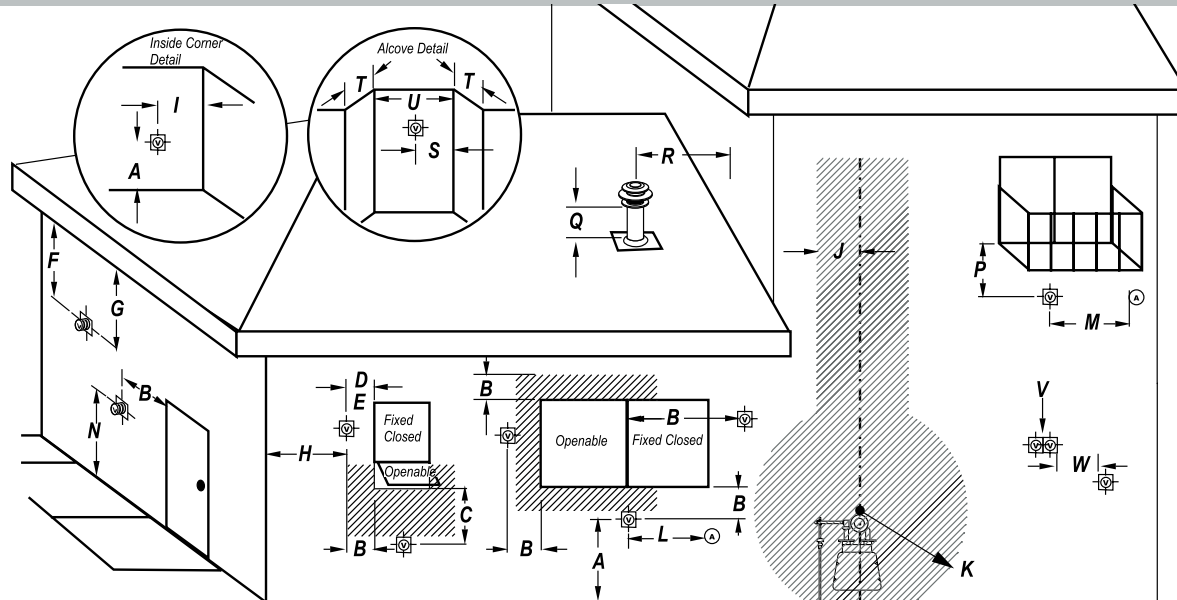

= vent termination   
 = air supply inlet   
 = area where termination is not permitted

**A** = clearance to the termination frame above grade, veranda, porch, deck, or balcony [16 inches (41 cm) minimum]

**B** = clearance to door, or sides and top of window, that may be opened [16 inches (41 cm) minimum for appliances ≤100 000 BTU/H (30kW)]

**C** = clearance to bottom of window that may be opened horizontally [36 inches (92 cm) minimum for appliances ≤100 000 BTU/H (30kW)]

**D** = no clearance to permanently closed window when installed with approved glass penetration termination

**E** = clearance to permanently closed window [16 inches 41 cm recommended to prevent condensation on window]

**F** = vertical clearance to ventilated soffit located above the termination within a horizontal distance of 2 feet (61 cm) from the centreline of the termination [22 inches (56 cm) minimum]

**G** = clearance to unventilated soffit [16 inches (41 cm) minimum to non-combustibles] [22 inches (56 cm) minimum to combustibles]

**H** = clearance to outside corner [9 inches (23 cm) minimum]

**I** = clearance to inside corner [12 inches (31 cm) minimum]

**J** = \* not to be installed above a meter/regulator assembly within 40" (103 cm) horizontally from the centreline of the regulator

**K** = clearance to service regulator vent outlet [3 feet minimum in the United States] [\*6 feet (1.8 m) minimum in Canada]

**L** = clearance to non-mechanical air supply inlet to building or the combustion air inlet to any other appliance [16 inches (41 cm) minimum for appliances ≤100 000 BTU/H (30kW)]

**M** = clearance to mechanical air supply inlet [\*6 feet (1.8 m) minimum]

† only permitted if veranda, porch, deck, or balcony has an open side that is equal to or greater than the depth of the enclosed area

\* as specified in CGA B149 Installation Codes. Note: local Codes or Regulations may require different clearance.

**N** = † clearance above paved sidewalk or a paved driveway located on public property [\*7 feet (2.1 m) minimum]

**P** = clearance under veranda, porch, deck, or balcony [16 inches (41 cm) minimum† to non-combustibles] [22 inches (56 cm) minimum† to combustibles]

**Q** = clearance above a roof [24 inches (61 cm) minimum]

**R** = clearance to adjacent walls and neighboring buildings [18 inches (46 cm) minimum]

**S** = clearance from corner in recessed location [12 inches (31 cm) minimum]


**T** = maximum depth in recessed location [48 inches (122 cm) minimum]

**U** = minimum width for back wall of recessed location [24 inches (61 cm) minimum]

**V** = no horizontal clearance between the frames of two terminations that are level.

**W** = horizontal clearance between the frames of two terminations that are not level. [36 inches (92 cm) minimum]

† a vent shall not terminate directly above a sidewalk or paved driveway which is located between two single family dwellings and serves both dwellings

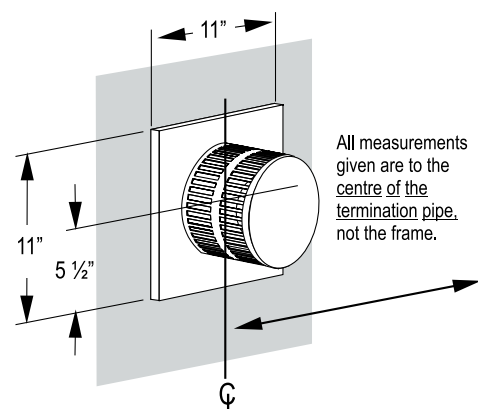

## Appendix B - Warranty

### The Warranty

The Companies warrants the Montigo Gas Appliance to be free from defects in materials and workmanship at the time of manufacture. On the Montigo fireplace, there is a ten-year warranty on the firebox and its components, a five-year warranty on the main burner and pilot burner, and a one-year warranty on the gas control valve, fibre logs and Power Vent Module. The Glass, plated / painted finishes, and refractory lining are exempt from the warranty.

### Remedy And Exclusions

The coverage of this Warranty is limited to all components of the Gas Appliance manufactured by The Companies.

This Warranty only covers Montigo Gas Appliances installed in the United States or Canada.

If the components of the Gas Appliance covered by this Warranty are found to be defective within the time frame stated (see The Companies right of investigation outlined below). The Companies will, at its option, replace or repair defective components of the Gas Appliance manufactured by The Companies at no charge, and will also pay for reasonable labour costs incurred in replacing or repairing components. If repair or replacement is not commercially practical, The Companies will, at its option, refund the purchase price of the Montigo Gas Appliance.

This Warranty covers only parts and labour as provided above. In no case shall The Companies be responsible for materials, components, or construction which are not manufactured or supplied by The Companies, or for the labour necessary to install, repair or remove such materials, components or construction. All replacement or repair components will be shipped F.O.B. the nearest The Companies factory.

### Qualifications To The Warranty

The Gas Appliance Warranty outlined above is further subject to the following qualifications:

- (1) The Gas Appliance must be installed in accordance with The Companies installation instructions and local building codes. The Warranty on this Montigo Gas Appliance covers only the component parts manufactured by The Companies. The use of components manufactured by others with this Montigo Gas Appliance could create serious safety hazards, may result in the denial of certification by recognized national safety agencies, and could be in violation of local building codes. This warranty does not cover any damages occurring from the use of any components not manufactured or supplied by The Companies
- (2) The Montigo Gas Appliance must be subjected to normal use. The Gas Appliances are designed to burn gas only. Burning conventional fireplace fuels such as wood, coal or any other solid fuel will cause damage to the Gas Appliance, will produce excessive temperatures and will result in a fire hazard.

### Limitations On Liability

It is expressly agreed and understood that The Companies sole obligation, and purchaser's exclusive remedy under this Warranty, under any other warranty, expressed or implied, or in contract, tort or otherwise, shall be limited to replacement, repair, or refund, as specified above.

In no event shall The Companies be responsible for any incidental or consequential damages caused by defects in its products, whether such damage occurs or is discovered before or after replacement or repair, and whether or not such damage is caused by The Companies negligence. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. The duration of any implied warranty with respect to this Montigo Gas Appliance is limited to the duration of the foregoing warranty. Some states do not allow limitation on how long an implied warranty lasts, so the above may not apply to you.

### Investigation Of Claims Against Warranty

The Companies reserves the right to investigate any and all claims against this Warranty and to decide upon method of settlement.

The Companies Are Not Responsible For Work Done Without Written Consent

The Companies shall in no event be responsible for any warranty work done without first obtaining The Companies written consent.

Dealers Have No Authority To Alter This Warranty

The Companies employees and dealers have no authority to make any warranties nor to authorize any remedies in addition to or inconsistent with those stated above.

### How To Register A Claim Against Warranty

In order for any claim under this Warranty to be valid, The Companies must be notified of the claimed defect in writing or by telephone, as soon as reasonably possible after the defect is discovered. Claims against this Warranty in writing should include the date of installation, and a description of the defect.

### Other Rights

This Warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

**NOTE:** The Companies as stated above refer to - Canadian Heating Products Inc. and/or Montigo Del Ray Corp.

*Canadian Heating Products Inc. and/or Montigo DelRay Corp. reserves the right to make changes at any time, without notice, in design, materials, specifications, prices and also to discontinue colors, styles and products.*



# Appendix C - State of Massachusetts

## Amendment

(Gas Fireplace / Equipment sold in the State of Massachusetts)

### 5.08: Modifications to NFPA-54, Chapter 10

**(1) Revise NFPA-54 section 10.5.4.2** by adding a second exception as follows:

Existing chimneys shall be permitted to have their use continued when a gas conversion burner is installed, and shall be equipped with a manually reset device that will automatically shut off the gas to the burner in the event of a sustained back-draft.

**(2) Revise 10.8.3** by adding the following additional requirements:

(a) For all side wall horizontally vented gas fueled equipment installed in every dwelling, building or structure used in whole or in part for residential purposes, including those owned or operated by the Commonwealth and where the side wall exhaust vent termination is less than seven (7) feet above finished grade in the area of the venting, including but not limited to decks and porches, the following requirements shall be satisfied:

**1. INSTALLATION OF CARBON MONOXIDE DETECTORS.** At the time of installation of the side wall horizontal vented gas fueled equipment, the installing plumber or gas fitter shall observe that a hard wired carbon monoxide detector with an alarm and battery back-up is installed on the floor level where the gas equipment is to be installed. In addition, the installing plumber or gas fitter shall observe that a battery operated or hard wired carbon monoxide detector with an alarm is installed on each additional level of the dwelling, building or structure served by the side wall horizontal vented gas fueled equipment. It shall be the responsibility of the property owner to secure the services of qualified licensed professionals for the installation of hard wired carbon monoxide detectors

a. In the event that the side wall horizontally vented gas fueled equipment is installed in a crawl space or an attic, the hard wired carbon monoxide detector with alarm and battery back-up may be installed on the next adjacent floor level.

b. In the event that the requirements of this subdivision can not be met at the time of completion of installation, the owner shall have a period of thirty (30) days to comply with the above requirements; provided, however, that during said thirty (30) day period, a battery operated carbon monoxide detector with an alarm shall be installed.

**2. APPROVED CARBON MONOXIDE DETECTORS.** Each carbon monoxide detector as required in accordance with the above provisions shall comply with NFPA 720 and be ANSI/UL 2034 listed and IAS certified.

**3. SIGNAGE.** A metal or plastic identification plate shall be permanently mounted to the exterior of the building at a minimum height of eight (8) feet above grade directly in line with the exhaust vent terminal for the horizontally vented gas fueled heating appliance or equipment. The sign shall read, in print size no less than one-half (1/2) inch in size, "GAS VENT DIRECTLY BELOW. KEEP CLEAR OF ALL OBSTRUCTIONS".

**4. INSPECTION.** The state or local gas inspector of the side wall horizontally vented gas fueled equipment shall not approve the installation unless, upon inspection, the inspector observes carbon monoxide detectors and signage installed in accordance with the provisions of 248 CMR 5.08(2)(a)1 through 4.

(b) EXEMPTIONS: The following equipment is exempt from 248 CMR 5.08(2)(a)1 through 4:

1. The equipment listed in Chapter 10 entitled "Equipment Not Required To Be Vented" in the most current edition of NFPA 54 as adopted by the Board; and

2. Product Approved side wall horizontally vented gas fueled equipment installed in a room or structure separate from the dwelling, building or structure used in whole or in part for residential purposes.

**(c) MANUFACTURER REQUIREMENTS - GAS EQUIPMENT VENTING SYSTEM PROVIDED.** When the manufacturer of Product Approved side wall horizontally vented gas equipment provides a venting system design or venting system components with the equipment, the instructions provided by the manufacturer for installation of the equipment and the venting system shall include:

1. Detailed instructions for the installation of the venting system design or the venting system components; and

2. A complete parts list for the venting system design or venting system.

**(d) MANUFACTURER REQUIREMENTS - GAS EQUIPMENT VENTING SYSTEM NOT PROVIDED.** When the manufacturer of a Product Approved side wall horizontally vented gas fueled equipment does not provide the parts for venting the flue gases, but identifies "special venting systems", the following requirements shall be satisfied by the manufacturer:

1. The referenced "special venting system" instructions shall be included with the appliance or equipment installation instructions; and

**2. The "special venting systems"** shall be Product Approved by the Board, and the instructions for that system shall include a parts list and detailed installation instructions.

(e) A copy of all installation instructions for all Product Approved side wall horizontally vented gas fueled equipment, all venting instructions, all parts lists for venting instructions, and/or all venting design instructions shall remain with the appliance or equipment at the completion of the installation.

**(3) After NFPA-54 section 10.10.4.2** add a new section 10.10.4.3 as follows:

When more than four gas appliances are to be vented through a common gas vent or common horizontal vent manifold, a plan of the proposed vent installation shall be submitted to the Inspector and the serving gas supplier for review and approval.

**Extraction from: Massachusetts Rules and Regulations**

**5.00: Amendments To 2002 Edition Of ANSI Z223.1-NFPA-54**

## Appendix D - Mobile Home

This appliance may be installed as an OEM installation in a manufactured home (USA only) or mobile home and must be installed in accordance with the manufacturer's instructions and the *Manufactured Home Construction and Safety Standard, Title 24 CFR, Part 3280*, in the United States or The Mobile Home Standard, *CAN / CSA Z240 MH Series*, in Canada. This appliance is only for use with the type(s) of gas indicated on the rating plate. A conversion kit is supplied with the appliance.

### H\*DLM-Mobile Home fireplaces:

The mobile home option is a factory installed on the H34DLM gas fireplaces, and are for use in a manufactured or mobile home.

### Note:

*The H34DM-E equipped with Hot Surface Ignition (HSI) are not approved for use in mobile or manufactured homes.*

### The H34DLM is rated for:

- Natural Gas at 18,000 BTU/H (5.28 Kilowatts) max. input, and 16,000 BTU/H (4.69 Kilowatts) min. input.
- Propane at 18,000 BTU/H (5.28 Kilowatts) max. input, and 16,000 BTU/H (4.69 Kilowatts) min. input.

A manufactured home (USA only) or mobile home OEM installation must conform with the *Manufactured Home Construction and Safety Standard, Title 24 CFR, Part 3280*, or when such a standard is not applicable, the *Standard for Fire Safety Criteria for Manufactured Home Installation Sites and Communities, ANSI/NFPA 501A*, in the United States or the *Mobile Home Standard, CAN / CSA Z240 MH Series*, in Canada.

### Gas Control Valve

The following gas control valve is installed on the H34DLM.

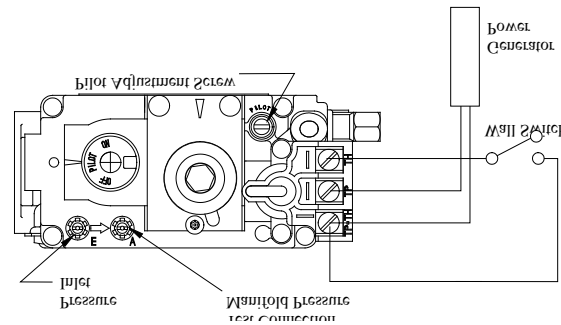


Figure B1. Sit Nova 820 gas valve.

### Conversion Kits

The H34DLM mobile home appliance is field convertible between Natural Gas (NG) and Propane (LP).

To convert from Natural Gas to Propane order conversion kit # RCV734.

To convert from Propane to Natural Gas order conversion kit H34DL\* Part No. # RCV834.

Conversion kits are available for standard H34DL-I conversion between Natural Gas (NG) and Propane (LP).

## **Notes**



XG0140 - 092210

**Canadian Heating Products Inc.**  
Langley, BC V4W 4A1

**Montigo Del Ray Corp.**  
Ferndale, WA 98248